

RECOIL SPRING ASSEMBLY FOR COMPACT FRAME GLOCK® PISTOLS - BROWNELLS BRN PISTOL RECOIL SPRING ASSEMBLY FOR GLOCK 19 GEN 1/3

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Spring Guide Rods](#)

Replacement recoil spring and guide rod assembly for use in Glock® compact frame pistols.



Attributes

- Name: [BROWNELLS BRN PISTOL RECOIL SPRING ASSEMBLY FOR GLOCK 19 GEN 1/3](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 078000651
- Mfr. No.: 02-2002-01-00
- Model: 19
- Weapon type: Glock
- Delivery weight: 0.005kg
- Shipping width: 76mm
- Shipping length: 203mm
- UPC: 050806004153

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for RECOIL SPRING ASSEMBLY FOR COMPACT FRAME GLOCK® PISTOLS](#)
- [About Us](#)

Safety Instruction Guide for RECOIL SPRING ASSEMBLY FOR COMPACT FRAME GLOCK® PISTOLS

Introduction

Thank you for choosing the RECOIL SPRING ASSEMBLY FOR COMPACT FRAME GLOCK® PISTOLS by BROWNELLS. This guide provides essential safety instructions, installation procedures, and disposal information to ensure the safe and effective use of this product in accordance with EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the recoil spring assembly is suitable for use in Glock® Model 19.
- Always handle firearms and their components with care to prevent accidents.
- Keep this product out of reach of children and unauthorized users.
- Regularly inspect the recoil spring assembly for signs of wear or damage before use.
- If you notice any defects or issues, do not attempt to use the assembly and seek professional assistance.

Specific Safety Precautions for Use

- Always wear appropriate protective gear, such as safety glasses, when handling firearms.
- Verify that the firearm is unloaded before installing or replacing the recoil spring assembly.
- Follow the manufacturer's instructions for your specific Glock® model to ensure compatibility and safety.
- Avoid using excessive force when installing the recoil spring assembly to prevent damage to the firearm or the assembly itself.
- Be aware of your surroundings and ensure that you are in a safe environment while using the firearm.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation, including a punch tool if required.

2. Installation:

- Remove the slide from the frame of the Glock® Model 19.
- Carefully remove the old recoil spring and guide rod assembly.
- Align the new recoil spring assembly with the slide and insert it into the appropriate position.
- Ensure that the assembly is seated correctly and securely.

3. Reassembly:

- Reattach the slide to the frame of the Glock® Model 19.
- Perform a function check to ensure the firearm operates correctly.
- Store the firearm in a safe location when not in use.

4. Usage:

- Always follow safe handling practices when using your Glock® pistol.
- Regularly clean and maintain the recoil spring assembly to ensure optimal performance.

Disposal Instructions

- Dispose of the recoil spring assembly in accordance with local regulations.
- Do not dispose of the assembly in regular household waste.
- Contact your local waste management authority for guidance on proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the recoil spring assembly, please refer to the manufacturer's website or contact their customer service for assistance.

By following these guidelines, you can help ensure safe usage and longevity of your RECOIL SPRING ASSEMBLY FOR COMPACT FRAME GLOCK® PISTOLS. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk