

MCR EXTRACTOR - FIGHTLITE INDUSTRIES MCR EXTRACTOR

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractors](#)

The FightLite Industries MCR Extractor is a replacement extractor for the MCR rifle.



Attributes

- Name: [FIGHTLITE INDUSTRIES MCR EXTRACTOR](#)
- Manufacturer: [FIGHTLITE INDUSTRIES](#)
- Product no.: 100019953
- Mfr. No.: 15068
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 854118002940

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for the FightLite Industries MCR Extractor](#)
- [About Us](#)

Safety Instruction Guide for the FightLite Industries MCR Extractor

Introduction

Thank you for choosing the FightLite Industries MCR Extractor. This guide provides essential safety instructions and guidelines to ensure the safe use and handling of this product. Please read this manual carefully before installation or use.

General Safety Guidelines

- Always follow all safety instructions provided in this guide.
- Ensure that the extractor is compatible with your MCR rifle model before installation.
- Keep the extractor and all related components out of reach of children.
- Regularly inspect the extractor for signs of wear or damage. Do not use if damaged.
- Report any unsafe products or incidents to the relevant authorities.
- Stay informed about product recalls via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use only as intended: The MCR Extractor is designed for use with the MCR rifle. Do not use it with any other firearm.
- Wear appropriate safety gear: Always wear safety glasses and hearing protection when handling firearms.
- Ensure the firearm is unloaded: Before installation or maintenance, always verify that your MCR rifle is unloaded.
- Avoid exposure to moisture: Keep the extractor dry and store it in a cool, dry place to prevent corrosion.
- Follow local laws: Be aware of and comply with all local laws and regulations regarding firearm modifications.

Instructions for Installation and Usage

1. Preparation

- Ensure that the MCR rifle is unloaded and the safety is engaged.
- Gather necessary tools for installation, including a screwdriver and any other required equipment.

2. Installation Steps

- Remove the existing extractor from the MCR rifle by following the manufacturer's instructions.
- Align the new MCR Extractor with the designated slot on the rifle.
- Secure the extractor in place using the appropriate screws, ensuring a tight fit without overtightening.
- Doublecheck that the extractor is installed correctly and securely.

3. PostInstallation Check

- Inspect the installation to confirm that there are no loose parts.
- Perform a function check on the rifle to ensure proper operation with the new extractor.

4. Usage

- Always handle the MCR rifle with care and respect.

- Regularly clean and maintain the extractor and rifle according to the manufacturer's recommendations.

Disposal Instructions

- Dispose of the MCR Extractor in accordance with local regulations for firearm components.
- Do not dispose of in regular household waste. Check for designated disposal sites for hazardous materials or firearm parts.

Contact Information for Further Support

For any questions or concerns regarding the FightLite Industries MCR Extractor, please refer to the manufacturer's website or contact their customer support. Ensure you have your product details ready for assistance.

Thank you for prioritizing safety and compliance while using the FightLite Industries MCR Extractor. Your responsible handling of this product contributes to a safer environment for all users.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk