

DIRTY BIRD ACES HIGH 12 X 18" TARGETS - BIRCHWOOD CASEY

DIRTY BIRD ACES HIGH 12 X 18" TARGETS 6 PACK

[Shooting Accessories](#) > [Targets & Accessories](#) > [Paper Targets](#)

BIRCHWOOD CASEY DIRTY BIRD ACES HIGH 12 X 18" TARGETS FEATURES:
Spot your shots easily? Intense splatter offers superior downrange contrast?
Great targets for all types of pistol-action shooting? Heavy tagboard construction 12" x 18"? 6 Pack



Attributes

- Name: [BIRCHWOOD CASEY DIRTY BIRD ACES HIGH 12 X 18" TARGETS 6 PACK](#)
- Manufacturer: [BIRCHWOOD CASEY](#)
- Product no.: 430114045
- Mfr. No.: BC-35776
- Style: Bullseye
- Target Size/Type: Large 12 to 20
- Type: Papers
- Quantity: 6
- Delivery weight: 1.937kg
- Shipping height: 317mm
- Shipping width: 463mm
- Shipping length: 30mm
- UPC: 888151076583

Table of Contents

- [Startpage](#)
- [DIRTY BIRD ACES HIGH 12 X 18" TARGETS Safety Instructions](#)
- [About Us](#)

DIRTY BIRD ACES HIGH 12 X 18" TARGETS Safety Instructions

Introduction

Thank you for choosing the DIRTY BIRD ACES HIGH 12 X 18" TARGETS by Birchwood Casey. This product is designed for safe and effective use in various shooting activities. To ensure your safety and the safety of others, please read and follow the guidelines outlined in this manual.

General Safety Guidelines

- Always handle firearms with care and follow all applicable laws and regulations.
- Ensure that the shooting area is safe and free from obstructions and bystanders.
- Use appropriate eye and ear protection when engaging in shooting activities.
- Keep targets out of reach of children and pets.
- Regularly inspect targets for wear and tear before use.
- Report any accidents or unsafe conditions to the relevant authorities.

Specific Safety Precautions for Use

- Ensure the target is securely positioned before firing at it.
- Do not shoot at targets that are not properly secured or are unstable.
- Avoid using targets in adverse weather conditions that may affect visibility or stability.
- Be aware of your surroundings and ensure that the area behind the target is safe.
- Use only suitable ammunition as specified by your firearm's manufacturer.
- Follow all manufacturer instructions for your firearm and ammunition.

Instructions for Installation and Usage

1. Target Setup:

- Choose a flat, stable surface or target stand to secure the DIRTY BIRD ACES HIGH target.
- Ensure that the target is at an appropriate height and distance for your shooting activity.

2. Target Attachment:

- Use tape or clips to attach the target securely to the backing surface.
- Ensure that the target is flat against the surface to avoid movement during shooting.

3. Shooting:

- Stand at a safe distance as recommended for the type of firearm being used.
- Aim carefully and fire at the target, ensuring that the area is clear of people and obstacles.
- After shooting, check the target for damage and replace it if necessary.

Disposal Instructions

- Dispose of used targets in accordance with local waste disposal regulations.
- Do not burn or incinerate the targets as they may contain materials that are harmful when burned.
- Recycle packaging materials where possible.

Contact Information for Further Support

For any safety inquiries or concerns regarding the DIRTY BIRD ACES HIGH 12 X 18" TARGETS, please refer to the contact information provided by the retailer or manufacturer at the time of purchase.

Conclusion

By following these safety instructions, you can ensure a safe and enjoyable experience with the DIRTY BIRD ACES HIGH 12 X 18" TARGETS. Always prioritize safety and responsibility when engaging in shooting activities. Thank you for choosing Birchwood Casey products.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk