

Reloading Die Spare Parts - Headpiece M16x1/M8x1

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Headpiece M16x1/M8x1, steel, blued and laser-marked – precision spare part for reloading dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Headpiece M16x1/M8x1](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017175
- Mfr. No.: 3000023V
- Thread: M16x1 / M8x1
- Delivery weight: 0.03kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- EAN/UPC: 3000023V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Headpiece M16x1/M8x1](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Headpiece M16x1/M8x1

Introduction

Thank you for purchasing the Reloading Die Spare Parts Headpiece M16x1/M8x1 by Triebel Waffenwerkzeuge. This guide provides important safety instructions and information to ensure the safe and effective use of this product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure the product is used for its intended purpose only.
- Always follow the manufacturer's instructions for use and maintenance.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of damage or wear.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about product recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves when using reloading equipment.
- Ensure that the reloading die is securely attached before use to prevent accidents.
- Do not exceed the manufacturer's recommended specifications for pressure and load.
- Avoid using the product in wet or damp conditions to prevent corrosion and ensure safe handling.
- Keep your workspace clean and organized to prevent accidents.
- Be aware of your surroundings and ensure that no one is in the immediate area while using the reloading die.

Instructions for Installation and Usage

1. Installation:

- Ensure that the workspace is clean and free of obstructions.
- Select the appropriate reloading die that corresponds with the headpiece (M16x1 or M8x1).
- Carefully screw the headpiece onto the reloading die, ensuring it is tightly secured without overtightening.
- Confirm that the reloading die is properly mounted on the reloading press.

2. Usage:

- Follow the specific reloading procedures outlined in your reloading manual.
- Always check that the headpiece is properly aligned before beginning the reloading process.
- Monitor the reloading process closely for any irregularities or issues.
- After use, clean the headpiece and reloading die to remove any debris or residue.

Disposal Instructions

- Dispose of the product in accordance with local regulations for metal and electronic waste.
- Do not dispose of the product in regular household waste.
- If the product is damaged or no longer usable, consider recycling the materials where possible.

Contact Information for Further Support

For any safety inquiries or further support regarding the Reloading Die Spare Parts Headpiece M16x1/M8x1, please reach out to the appropriate EUbased contact. Ensure you have the product details ready for reference.

By adhering to these safety guidelines and instructions, you contribute to a safer reloading experience. Thank you for choosing the Reloading Die Spare Parts Headpiece M16x1/M8x1.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk