

Sizing Die Spindle - Spindle M6/M4-5,6 L=100mm

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Spindle for sizing dies, precision-made from steel and blued - high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Spindle M6/M4-5,6 L=100mm](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017181
- Mfr. No.: 3000040AV-100
- Length: 100
- Thread: M6 / M4-5,6
- Delivery weight: 0.02kg
- Shipping height: 100mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000040AV-100

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Sizing Die Spindle M6/M45,6 L=100mm](#)
- [About Us](#)

Safety Instruction Guide for Sizing Die Spindle M6/M45,6 L=100mm

Introduction

Thank you for purchasing the Sizing Die Spindle M6/M45,6 L=100mm. This guide provides essential safety instructions to ensure proper use and maintenance of the product. Please read this guide carefully before using the spindle. Your safety is our priority.

General Safety Guidelines

- Always handle the spindle with care to avoid injury.
- Ensure that the spindle is used in accordance with the manufacturer's instructions.
- Inspect the spindle for any signs of damage before use. Do not use if damaged.
- Keep the spindle out of reach of children and vulnerable individuals.
- Use personal protective equipment (PPE) such as safety glasses and gloves when operating machinery with the spindle.
- Follow all safety regulations and guidelines applicable to your specific reloading setup.

Specific Safety Precautions for Use

- Ensure the spindle is compatible with your sizing dies, specifically those from Triebel Waffenwerkzeuge.
- Do not exceed the recommended torque settings when installing the spindle to avoid breakage.
- Avoid using the spindle for any purpose other than intended. Misuse can lead to accidents or injury.
- Always keep your work area clean and organized to prevent accidents.
- If you experience any unusual behavior during operation, cease use immediately and inspect the spindle.

Instructions for Installation and Usage

1. Installation:

- Ensure the machine is powered off before installation.
- Remove the existing spindle if applicable, following the manufacturer's instructions.
- Align the new spindle with the sizing die and insert it securely.
- Tighten the spindle according to the manufacturer's torque specifications.
- Doublecheck that the spindle is firmly in place before operating the machine.

2. Usage:

- Power on the machine and allow it to reach operational speed before use.
- Use the spindle only with compatible dies to ensure effective performance.
- Monitor the spindle during operation for any signs of wear or malfunction.
- If the spindle becomes hot, allow it to cool before handling.

Disposal Instructions

- Dispose of the spindle in accordance with local regulations for metal waste.
- Do not dispose of the spindle in household waste.
- Consider recycling options where available to minimize environmental impact.

Contact Information for Further Support

If you have questions or need assistance regarding the Sizing Die Spindle, please refer to the manufacturer's contact information included with your product packaging.

This guide is designed to ensure your safety and the effective use of the Sizing Die Spindle. For any concerns regarding safety or product performance, please consult this manual or reach out to the manufacturer. Thank you for prioritizing safety in your reloading practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk