

Sizing Die Spindle - Spindle M6/M4 L=100mm

Spindle for sizing dies, precision-made from steel and blued – high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Spindle M6/M4 L=100mm
- Manufacturer: TRIEBEL
- Product no.: EU2017183
- Mfr. No.: 3000041AV-100
- Length: 100
- Thread: M6 / M4
- Delivery weight: 0.02kg
- Shipping height: 100mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000041AV-100

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for Sizing Die Spindle M6/M4 L=100mm](#)

Safety Instruction Guide for Sizing Die Spindle M6/M4 L=100mm

Introduction

Thank you for choosing the Sizing Die Spindle M6/M4 L=100mm. This guide provides essential safety instructions to ensure the safe and effective use of this product. Please read this guide carefully before use to minimize risks and ensure compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that all safety instructions are followed to prevent accidents or injuries.
- Use the product only for its intended purpose, which is to assist in the resizing of cartridges.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the spindle for any signs of wear or damage before each use.
- Do not use the spindle if it appears damaged or malfunctioning.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when using the spindle.
- Ensure that the work area is clean and free of obstructions to prevent tripping hazards.
- Use the spindle in a wellventilated area to avoid inhaling any fumes or dust generated during the resizing process.
- Do not exceed the recommended torque specifications to prevent damage to the spindle or the dies.
- Avoid using excessive force when resizing; this can lead to equipment failure or personal injury.
- Be cautious of moving parts when operating machinery that utilizes the spindle.

Instructions for Installation and Usage

1. Installation:

- Ensure that the work area is clean and organized.
- Confirm that the spindle is compatible with the resizing die being used (M6/M4).
- Securely attach the spindle to the resizing die, ensuring it is tightly fastened but not overtorqued.
- Doublecheck all connections to ensure stability before proceeding.

2. Usage:

- Set up your reloading press according to the manufacturer's instructions.
- Insert the resizing die with the attached spindle into the press.
- Adjust the press settings according to the specifications for the cartridge being resized.
- Begin the resizing process, applying steady pressure without exceeding limits.
- Once completed, carefully remove the resized cartridge and inspect for quality.

Disposal Instructions

- Dispose of the spindle and any associated materials in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management authority for guidance on proper disposal methods.

Contact Information for Further Support

For any inquiries or further assistance regarding this product, please refer to the contact details provided by your retailer or manufacturer.

Thank you for your attention to these safety instructions. By following these guidelines, you can ensure a safe and effective experience with your Sizing Die Spindle M6/M4 L=100mm.