

Sizing Die Spindle - Spindle M6/M4 L=120mm

Spindle for sizing dies, precision-made from steel and blued – high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Spindle M6/M4 L=120mm
- Manufacturer: TRIEBEL
- Product no.: EU2017185
- Mfr. No.: 3000041AV-120
- Length: 120
- Thread: M6 / M4
- Delivery weight: 0.02kg
- Shipping height: 120mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000041AV-120

Table of Contents

- [Startpage](#)
- [English: Sizing Die Spindle Safety Instruction Guide](#)

Sizing Die Spindle Safety Instruction Guide

Introduction

Thank you for choosing the Sizing Die Spindle M6/M4 L=120mm. This guide provides important safety instructions to ensure the safe use of this product. It is designed for precision reloading performance and is compatible with original dies from Triebel Waffenwerkzeuge. Please read this guide thoroughly before using the product.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always inspect the product for any signs of damage or wear before use.
- Keep the product out of reach of children and vulnerable individuals.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling the spindle.
- Be aware of your surroundings and ensure that the work area is clean and organized.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Always follow the manufacturer's instructions when using the spindle.
- Do not exceed the recommended load limits for the spindle.
- Avoid using the spindle with incompatible dies or components.
- Ensure that all connections are secure before operation to prevent accidents.
- Do not modify the spindle or use it in a manner not specified in this guide.
- If you experience any unusual noises or vibrations during use, stop immediately and inspect the product.

Instructions for Installation and Usage

Installation

1. Ensure that your work area is clean and free of any obstructions.
2. Verify that the spindle is compatible with your sizing die.
3. Securely attach the spindle to the sizing die using the appropriate threading (M6/M4).
4. Make sure all connections are tight and secure before proceeding.

Usage

1. Prepare your reloading components and ensure you have all necessary tools at hand.
2. Carefully insert the sizing die into your reloading press.
3. Adjust the spindle as needed to ensure proper alignment with the die.
4. Perform the reloading process according to the manufacturer's instructions.
5. After use, carefully disassemble the spindle from the sizing die and store it in a safe place.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the spindle in regular household waste.
- If the product is no longer usable, consider recycling it if possible.

Contact Information for Further Support

For safety inquiries or further support, please contact the manufacturer or authorized dealer. Always refer to the

official website for the most current contact information and resources.

By following these safety instructions, you can ensure a safe and effective experience with the Sizing Die Spindle M6/M4 L=120mm. Thank you for prioritizing safety in your reloading activities.