

Sizing Die Spindle - Spindle M8/M6 L=115mm

Spindle for sizing dies, precision-made from steel and blued – high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Spindle M8/M6 L=115mm
- Manufacturer: TRIEBEL
- Product no.: EU2017187
- Mfr. No.: 3000043AV-115
- Length: 115
- Thread: M8 / M6
- Delivery weight: 0.02kg
- Shipping height: 115mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000043AV-115

Table of Contents

- [Startpage](#)
- [English: Sizing Die Spindle M8/M6 L=115mm Safety Instruction Guide](#)

Sizing Die Spindle M8/M6 L=115mm Safety Instruction Guide

Introduction

Thank you for choosing the Sizing Die Spindle M8/M6 L=115mm. This guide provides important safety information and instructions to ensure safe and effective use of the product. Please read this guide thoroughly before using the spindle.

General Safety Guidelines

- Always ensure that the spindle is used in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the spindle for any damage before use. Do not use if damaged.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling the spindle.
- Ensure that the working environment is clean, dry, and free from hazards.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Ensure that the spindle is compatible with the sizing dies you are using.
- Do not exceed the recommended specifications for the spindle, including length and thread size.
- Avoid using the spindle in wet or damp conditions to prevent rust and deterioration.
- Do not apply excessive force during operation to avoid damaging the spindle or the dies.
- Always ensure that the spindle is securely attached before use to prevent accidents.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools and materials before beginning installation.
- Ensure that the work area is clean and welllit.

2. Installation Steps

- Remove any existing spindle from the sizing die.
- Align the new spindle with the sizing die, ensuring that the thread matches (M8 / M6).
- Carefully screw the spindle into place, ensuring a secure fit without overtightening.

3. Usage Instructions

- Once installed, check the alignment of the spindle with the sizing die.
- Begin the reloading process, following the specific instructions for your reloading setup.
- Monitor the spindle during use for any signs of wear or damage.

Disposal Instructions

- Dispose of the spindle responsibly at a designated recycling facility.
- Follow local regulations regarding the disposal of metal products.
- Do not dispose of the spindle in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the Sizing Die Spindle M8/M6 L=115mm, please refer to the manufacturer's contact information provided with your product. It is important to have a reliable point of contact for safety inquiries and support.

Thank you for your attention to these safety instructions. Your safety is our priority.