

Sizing Die Spindle - Spindle M8/M6 L=125mm

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Spindle for sizing dies, precision-made from steel and blued - high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Spindle M8/M6 L=125mm](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017188
- Mfr. No.: 3000043AV-125
- Length: 125
- Thread: M8 / M6
- Delivery weight: 0.02kg
- Shipping height: 125mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000043AV-125

Table of Contents

- [Startpage](#)
- [Sizing Die Spindle M8/M6 L=125mm Safety Instruction Guide](#)
- [About Us](#)

Sizing Die Spindle M8/M6 L=125mm Safety Instruction Guide

Introduction

Thank you for choosing the Sizing Die Spindle M8/M6 L=125mm. This precisionmade product is designed for reliable reloading performance. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always handle the spindle with care to avoid injury.
- Ensure that the spindle is compatible with your reloading equipment before use.
- Keep the spindle out of reach of children and vulnerable individuals.
- Regularly inspect the spindle for signs of wear or damage before each use.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay updated on product recalls and safety alerts through the EU Safety Gate platform.

Specific Safety Precautions for Use

- Use the spindle only for its intended purpose—sizing dies.
- Do not modify the spindle in any way; modifications can lead to unsafe conditions.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during use.
- Ensure that your work area is clean and free from clutter to prevent accidents.
- Always follow the manufacturer's instructions for your specific reloading equipment when using the spindle.

Instructions for Installation and Usage

1. Installation:

- Ensure that the reloading press is turned off and unplugged before installation.
- Remove any existing spindle from the press.
- Insert the Sizing Die Spindle M8/M6 into the designated hole in the reloading press.
- Secure the spindle in place according to the manufacturer's guidelines for your reloading equipment.

2. Usage:

- Before starting, doublecheck that the spindle is securely installed.
- Set up your reloading dies as per the manufacturer's instructions.
- Operate the reloading press smoothly and steadily to avoid any sudden jerks or movements.
- After use, clean the spindle to remove any debris or residue.

Disposal Instructions

- When the spindle has reached the end of its useful life, dispose of it in accordance with local regulations.
- Do not dispose of the spindle in regular household waste.
- Consider recycling the spindle if possible, as it is made from steel.

Contact Information for Further Support

For any questions or concerns regarding the Sizing Die Spindle M8/M6 L=125mm, please refer to the manufacturer's contact information provided with the product packaging or visit their official website for support.

Thank you for your attention to these safety instructions. We wish you a safe and successful reloading experience!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk