

Sizing Die Spindle - Spindle M8/M6 L=175mm

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Spindle for sizing dies, precision-made from steel and blued - high-quality replacement part for reliable reloading performance. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Spindle M8/M6 L=175mm](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017191
- Mfr. No.: 3000043AV-175
- Length: 175
- Thread: M8 / M6
- Delivery weight: 0.02kg
- Shipping height: 175mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN: 3000043AV-175

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Sizing Die Spindle M8/M6 L=175mm](#)
- [About Us](#)

Safety Instruction Guide for Sizing Die Spindle M8/M6 L=175mm

Introduction

Thank you for choosing the Sizing Die Spindle M8/M6 L=175mm. This precisionmade spindle is designed for use with sizing dies and is a highquality replacement part that ensures reliable reloading performance. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Always handle the spindle with care to avoid injury.
- Ensure that the spindle is compatible with your specific reloading equipment.
- Store the spindle in a dry and secure location away from children and pets.
- Regularly inspect the spindle for any signs of wear or damage before use.
- Follow the manufacturer's instructions for all reloading processes to minimize risks.

Specific Safety Precautions for Use

- Before using the spindle, ensure that the reloading press is turned off and unplugged.
- Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, when handling or using the spindle.
- Avoid using excessive force when installing or removing the spindle to prevent damage.
- Do not use the spindle for any purpose other than its intended use.
- Keep hands and clothing clear of moving parts during operation to prevent entanglement.

Instructions for Installation and Usage

1. Installation:

- Ensure that the reloading press is disconnected from power and is in a safe state.
- Remove the existing spindle if applicable, following the manufacturer's guidelines.
- Align the new Sizing Die Spindle M8/M6 L=175mm with the die holder.
- Securely fasten the spindle using the appropriate tools, ensuring it is snug but not overtightened.

2. Usage:

- Always refer to the specific instructions provided with your reloading equipment.
- Load the die as per the manufacturer's recommendations.
- Monitor the operation closely and stop immediately if any unusual noises or movements occur.
- After use, clean the spindle to remove any debris or residue to maintain its performance.

Disposal Instructions

- Dispose of the spindle in accordance with local regulations.
- If the spindle is damaged or no longer needed, consider recycling it where possible.
- Do not dispose of the spindle in regular household waste if it contains hazardous materials.

Contact Information for Further Support

For any safety inquiries or concerns regarding the Sizing Die Spindle M8/M6 L=175mm, please refer to the manufacturer's guidelines or contact the designated support channels available in your region.

Thank you for your attention to these safety instructions. Your safety is our priority, and we hope you enjoy using the Sizing Die Spindle M8/M6 L=175mm for your reloading needs.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk