

Reloading Die Spare Parts - Decapping Pin Holder ⌀5,6/M4

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Decapping pin holder made from high-quality brass – secures the decapping pin on the spindle of reloading dies. Precision-made for reliable function. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Decapping Pin Holder ⌀5,6/M4](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017579
- Mfr. No.: 3000060.01V
- Thread: M4
- Delivery weight: 0.001kg
- Shipping height: 10mm
- Shipping width: 5mm
- Shipping length: 5mm
- EAN/UPC: 3000060.01V

Table of Contents

- [Startpage](#)
- [Reloading Die Spare Parts Decapping Pin Holder Safety Instruction Guide](#)
- [About Us](#)

Reloading Die Spare Parts Decapping Pin Holder Safety Instruction Guide

Introduction

Thank you for purchasing the Reloading Die Spare Parts Decapping Pin Holder. This guide provides essential safety instructions, usage guidelines, and contact information for support. Please read this document carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that all components are suitable for use with your specific reloading dies.
- Always operate the decapping pin holder in a wellventilated area.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the decapping pin holder for signs of wear or damage.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Handle the decapping pin holder with care to avoid injury.
- Do not use the decapping pin holder if it shows any signs of damage or malfunction.
- Ensure that the decapping pin is securely fastened before use.
- Follow the manufacturer's instructions for your specific reloading die to ensure compatibility.
- Avoid using excessive force when installing or removing the decapping pin holder.

Instructions for Installation and Usage

1. Installation:

- Remove the decapping pin holder from its packaging.
- Ensure that the threaded end of the decapping pin holder is clean and free of debris.
- Align the decapping pin holder with the spindle of your reloading die.
- Gently screw the decapping pin holder into place, ensuring it is securely fastened but not overtightened.

2. Usage:

- Once installed, insert the decapping pin into the holder.
- Ensure that the decapping pin is properly aligned and secured within the holder.
- Operate the reloading die according to the manufacturer's instructions, observing all safety precautions.
- After use, inspect the decapping pin holder and pin for any signs of wear or damage.

Disposal Instructions

- Dispose of the decapping pin holder in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Consider recycling the product if possible, following local recycling guidelines.

Contact Information for Further Support

For any safety inquiries or support, please contact the manufacturer directly. Ensure you have the product

details on hand for assistance.

By following these guidelines, you can ensure safe and effective use of the Reloading Die Spare Parts Decapping Pin Holder. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk