

Reloading Die Spare Parts - Decapping Pin Holder ⌀5,2/M4

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Decapping pin holder made from high-quality brass – secures the decapping pin on the spindle of reloading dies. Precision-made for reliable function. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Decapping Pin Holder ⌀5,2/M4](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017580
- Mfr. No.: 3000061.01V
- Thread: M4
- Delivery weight: 0.05kg
- Shipping height: 10mm
- Shipping width: 5mm
- Shipping length: 5mm
- EAN/UPC: 3000061.01V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Decapping Pin Holder](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Decapping Pin Holder

Introduction

Thank you for choosing the Reloading Die Spare Parts Decapping Pin Holder. This product is designed to securely hold the decapping pin on the spindle of reloading dies, ensuring reliable function and precision. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that you are using the product for its intended purpose.
- Always inspect the decapping pin holder before use for any signs of damage or wear.
- Keep this product out of reach of children and vulnerable individuals.
- Follow all manufacturer instructions for use and maintenance.
- Report any unsafe conditions or product failures to the appropriate authorities.

Specific Safety Precautions for Use

- Use only with original dies from Triebel Waffenwerkzeuge to ensure compatibility and safety.
- Do not attempt to modify or alter the decapping pin holder in any way.
- Always wear appropriate safety gear, such as safety glasses, when using reloading equipment.
- Do not exceed the recommended torque specifications when securing the decapping pin holder.
- Ensure that the work area is clean and free of hazards before beginning any reloading activity.

Instructions for Installation and Usage

1. Installation

- Ensure that the reloading die is securely mounted in the reloading press.
- Align the decapping pin holder with the spindle of the reloading die.
- Carefully screw the decapping pin holder onto the spindle using the M4 thread.
- Tighten securely, but do not overtighten to avoid damage.

2. Usage

- Insert the decapping pin into the holder, ensuring it is properly seated.
- Operate the reloading press according to the manufacturer's instructions.
- Regularly check the decapping pin holder during use to ensure it remains secure.

Disposal Instructions

- Dispose of the decapping pin holder in accordance with local regulations.
- Do not dispose of in regular household waste if it is damaged or broken.
- Consider recycling if the material is suitable for it.

Contact Information for Further Support

For any inquiries related to safety, usage, or product support, please contact the manufacturer or your local retailer. Always ensure that you have the product information ready for reference.

By following these guidelines, you can ensure safe and effective use of the Reloading Die Spare Parts Decapping Pin Holder. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk