

Reloading Die Spare Parts - Decapping Pin Holder ⌀8,6/M6

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Decapping pin holder made from high-quality brass – secures the decapping pin on the spindle of reloading dies. Precision-made for reliable function. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Decapping Pin Holder ⌀8,6/M6](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017581
- Mfr. No.: 3000063V
- Thread: M6
- Delivery weight: 0.05kg
- Shipping height: 10mm
- Shipping width: 5mm
- Shipping length: 5mm
- EAN/UPC: 3000063V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Decapping Pin Holder](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Decapping Pin Holder

Introduction

Thank you for choosing the Reloading Die Spare Parts Decapping Pin Holder. This guide provides essential safety information and instructions to ensure safe and effective use of the product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as described in this guide.
- Always handle the decapping pin holder with care to avoid injury.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before use.
- If you notice any defects, discontinue use immediately and contact a qualified professional.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when using reloading equipment.
- Do not exceed the manufacturer's specifications for pressure and load.
- Ensure that the decapping pin is securely fastened in the holder before use.
- Avoid using the product in wet or humid conditions to prevent corrosion.
- Store the product in a dry and safe place when not in use.

Instructions for Installation and Usage

1. Installation of the Decapping Pin Holder

- Identify the spindle of your reloading die.
- Align the decapping pin holder with the spindle.
- Securely fasten the holder to the spindle by turning it clockwise until snug.
- Ensure that the decapping pin is firmly seated in the holder.

2. Usage of the Decapping Pin Holder

- Confirm that the reloading die is properly installed in your reloading press.
- Insert the case to be decapped into the press.
- Operate the press according to the manufacturer's instructions, ensuring the decapping pin engages the primer.
- Monitor the process closely to ensure safe operation and avoid jams.

Disposal Instructions

- Dispose of the product in accordance with local regulations regarding metal waste.
- Do not dispose of the product in regular household waste.
- Consider recycling options where available to minimize environmental impact.

Contact Information for Further Support

For any inquiries regarding safety or product issues, please reach out to the appropriate contact point as provided by the manufacturer. Always ensure that you have the product details available when seeking

assistance.

Thank you for prioritizing safety and following these guidelines. Enjoy your reloading experience!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk