

# Reloading Die Spare Parts - Headpiece M26x1,5/M6

Headpiece, made from steel, blued and precision-manufactured – top retaining nut for reloading dies with spindle pass-through. Ensures secure guidance and fixation of the spindle. Suitable for original dies from Triebel  
Waffenwerkzeuge.



## Attributes

- Name: Headpiece M26x1,5/M6
- Manufacturer: TRIEBEL
- Product no.: EU2017585
- Mfr. No.: 3000130V
- Thread: M26x1,5 / M6
- Delivery weight: 0.05kg
- Shipping height: 30mm
- Shipping width: 30mm
- Shipping length: 30mm
- EAN/UPC: 3000130V

# Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for Reloading Die Spare Parts Headpiece M26x1,5/M6](#)

# Safety Instruction Guide for Reloading Die Spare Parts Headpiece M26x1,5/M6

## Introduction

Thank you for choosing the Reloading Die Spare Parts Headpiece M26x1,5/M6. This guide provides important safety information and instructions to ensure the safe use of this product. Please read this guide carefully before using the headpiece.

## General Safety Guidelines

- Ensure that the headpiece is used only for its intended purpose as a part of reloading dies.
- Regularly inspect the headpiece for any signs of wear or damage. Do not use if damaged.
- Keep the headpiece out of reach of children and vulnerable individuals to prevent accidents.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling the headpiece.
- Follow all local regulations and guidelines regarding the use of reloading equipment.
- Report any unsafe products or incidents to the relevant authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform regularly.

## Specific Safety Precautions for Use

- Always ensure the headpiece is securely attached to the reloading die before use.
- Do not modify the headpiece or use it in any way that is not recommended by the manufacturer.
- Avoid using the headpiece with incompatible reloading dies.
- Ensure that the area where you are using the headpiece is welllit and free from distractions.
- Do not exceed the recommended torque settings when tightening the retaining nut.
- If you experience any difficulty during installation or usage, stop immediately and consult the instructions or seek assistance.

## Instructions for Installation and Usage

### 1. Installation:

- Ensure that the reloading die is clean and free from debris.
- Align the headpiece with the spindle passthrough of the reloading die.
- Gently insert the headpiece into the die.
- Secure the headpiece by tightening the top retaining nut. Use the appropriate tool to ensure a snug fit without overtightening.

### 2. Usage:

- Once the headpiece is installed, check for stability and ensure it is properly fixed in place.
- Proceed with reloading operations as per the guidelines provided with your reloading die.
- After use, remove the headpiece carefully, ensuring not to damage any components.

## Disposal Instructions

- Dispose of the headpiece according to local regulations for metal waste.
- Do not throw the headpiece in regular household waste.
- If the headpiece is damaged beyond repair, ensure it is recycled or disposed of in a safe manner to prevent environmental harm.

## **Contact Information for Further Support**

For any questions or concerns regarding the use of the Reloading Die Spare Parts Headpiece M26x1,5/M6, please refer to the manufacturer's contact details provided with the product packaging or visit the manufacturer's website for more information.

Thank you for your attention to these safety instructions. Your safety is our priority.