

Reloading Die Spare Parts - Headpiece M18x1/M6

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Headpiece, made from steel, blued and precision-manufactured – top retaining nut for reloading dies with spindle pass-through. Ensures secure guidance and fixation of the spindle. Suitable for original dies from Triebel
Waffenwerkzeuge.



Attributes

- Name: [Headpiece M18x1/M6](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017587
- Mfr. No.: 3000132V
- Thread: M18x1 / M6
- Delivery weight: 0.05kg
- Shipping height: 30mm
- Shipping width: 30mm
- Shipping length: 30mm
- EAN/UPC: 3000132V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Headpiece M18x1/M6](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Headpiece M18x1/M6

Introduction

Thank you for choosing the Reloading Die Spare Parts Headpiece M18x1/M6. This guide provides important safety instructions to ensure the safe and effective use of the product. Please read this guide carefully before using the headpiece to ensure a safe experience.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified.
- Always handle the headpiece with care to prevent injury.
- Keep the headpiece out of reach of children and vulnerable individuals.
- Regularly inspect the headpiece for any signs of wear or damage before use.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including gloves and eye protection, when using reloading equipment.
- Ensure that the reloading die is securely attached before operating the equipment.
- Do not exceed the recommended torque specifications when tightening the retaining nut.
- Avoid using the headpiece if it is damaged or shows signs of wear.
- Do not modify or alter the headpiece in any way.

Instructions for Installation and Usage

1. Installation:

- Ensure that the reloading die is clean and free from debris.
- Align the headpiece with the spindle of the reloading die.
- Carefully screw the headpiece onto the die until it is handtight.
- Use a wrench to securely tighten the retaining nut, ensuring it is not overtightened.

2. Usage:

- Confirm that the headpiece is properly installed and secure before beginning reloading operations.
- Follow the manufacturer's instructions for the specific reloading equipment being used.
- Monitor the operation regularly to ensure that the headpiece remains secure and functional.

Disposal Instructions

- Dispose of the headpiece in accordance with local waste management regulations.
- If the headpiece is damaged beyond repair, ensure that it is disposed of in a manner that prevents it from posing a risk to others.

Contact Information for Further Support

For any questions or concerns regarding the safety and use of the Reloading Die Spare Parts Headpiece M18x1/M6, please refer to the manufacturer's contact details provided with the product packaging or

documentation.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk