

Neck Bushing ⌀12,7-5,94/.2339

Neck sizing bushing made from high-quality hardened steel, precision-ground internally and externally in a single setup on CNC machines – ensuring perfect concentricity and maximum dimensional accuracy. Designed for precise neck sizing. Suitable for original reloading dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Neck Bushing ⌀12,7-5,94/.2339
- Manufacturer: TRIEBEL
- Product no.: EU2017593
- Mfr. No.: 3000240V-05.94
- Diameter mm: 12,7 / 5,94
- Delivery weight: 0.02kg
- Shipping height: 25mm
- Shipping width: 60mm
- Shipping length: 50mm
- EAN/UPC: 3000240V-05.94

Table of Contents

- [Startpage](#)
- [English: Neck Bushing Safety Instruction Guide](#)

Neck Bushing Safety Instruction Guide

Introduction

Thank you for choosing the Neck Bushing for your reloading needs. This guide provides essential safety instructions and usage information to ensure your safety and the optimal performance of the product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the Neck Bushing is used solely for its intended purpose of neck sizing in reloading processes.
- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves while handling or using the Neck Bushing.
- Keep the Neck Bushing out of reach of children and vulnerable individuals to prevent accidental injury.
- Regularly inspect the Neck Bushing for any signs of damage or wear. Do not use if damaged.
- Follow all local regulations and guidelines regarding the handling and usage of reloading tools and equipment.

Specific Safety Precautions for Use

- Handle the Neck Bushing with care to avoid injury from sharp edges or points.
- Ensure that the Neck Bushing is properly secured in your reloading die before use to prevent it from loosening during operation.
- Do not exceed the recommended load limits for your reloading setup, as this may cause damage to the Neck Bushing or create safety hazards.
- Always follow the manufacturer's instructions for your reloading die and any associated equipment.
- If you experience any unusual noise, vibration, or difficulty during operation, stop using the tool immediately and inspect it for issues.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading die is clean and free of debris.
- Carefully insert the Neck Bushing into the reloading die, ensuring it is seated properly.
- Tighten the locking mechanism of the die to secure the Neck Bushing in place.
- Doublecheck that the Neck Bushing is firmly in position before proceeding.

2. Usage:

- Adjust your reloading press according to the specifications for neck sizing.
- Insert the case into the reloading die and apply the necessary pressure to resize the neck.
- Monitor the process closely to ensure that the Neck Bushing is functioning correctly.
- After use, clean the Neck Bushing to remove any residue or debris.

Disposal Instructions

- Dispose of the Neck Bushing in accordance with local regulations for metal waste.
- Do not dispose of the Neck Bushing in regular household waste.
- If the Neck Bushing is worn or damaged beyond use, consider recycling it where facilities are available.

Contact Information for Further Support

For any inquiries or concerns regarding the Neck Bushing, please refer to the manufacturer's contact information included with your product packaging or visit the manufacturer's website.

Thank you for your attention to these safety instructions. Using the Neck Bushing responsibly will help ensure a safe and effective reloading experience.