

Neck Bushing ⌀12,7-8,92/.3512

Neck sizing bushing made from high-quality hardened steel, precision-ground internally and externally in a single setup on CNC machines – ensuring perfect concentricity and maximum dimensional accuracy. Designed for precise neck sizing. Suitable for original reloading dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Neck Bushing ⌀12,7-8,92/.3512
- Manufacturer: TRIEBEL
- Product no.: EU2017752
- Mfr. No.: 3000240V-08.92
- Diameter mm: 12,7 / 8,92
- Delivery weight: 0.02kg
- Shipping height: 25mm
- Shipping width: 60mm
- Shipping length: 50mm
- EAN/UPC: 3000240V-08.92

Table of Contents

- [Startpage](#)
- [English: Neck Bushing Safety Instruction Guide](#)

Neck Bushing Safety Instruction Guide

Introduction

Thank you for choosing the Neck Bushing. This guide provides essential safety instructions to ensure the safe use of the product. Please read this document carefully before using the Neck Bushing to avoid any potential hazards.

General Safety Guidelines

- Ensure that the Neck Bushing is used only for its intended purpose: precise neck sizing in reloading applications.
- Always inspect the Neck Bushing for any signs of damage or wear before use. Do not use if damaged.
- Keep the Neck Bushing out of reach of children and vulnerable individuals to prevent accidental injury.
- Store the Neck Bushing in a safe and dry place when not in use to avoid environmental damage.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including safety glasses, when using the Neck Bushing to protect against debris.
- Use the Neck Bushing only with compatible reloading dies from Triebel Waffenwerkzeuge to ensure safety and efficiency.
- Do not exceed the specified dimensions (Diameter V mm: 12.7 / 8.92) during use to avoid malfunction or damage.
- Ensure that the CNC machine used for neck sizing is properly calibrated to prevent inaccuracies in sizing.
- Follow all manufacturer instructions for the CNC machine to ensure safe operation.

Instructions for Installation and Usage

1. Installation:

- Ensure that the CNC machine is turned off and unplugged before installing the Neck Bushing.
- Securely attach the Neck Bushing to the designated area of the CNC machine according to the manufacturer's instructions.
- Doublecheck that the bushing is tightly secured and properly aligned before proceeding.

2. Usage:

- Power on the CNC machine and select the appropriate settings for neck sizing.
- Carefully monitor the operation of the machine during use to ensure that everything is functioning correctly.
- After completing the neck sizing process, power off the machine and remove the Neck Bushing carefully.
- Clean the Neck Bushing after each use to maintain its precision and longevity.

Disposal Instructions

- Dispose of the Neck Bushing in accordance with local regulations for metal waste.
- Do not throw the Neck Bushing in regular household waste as it may contain materials that require special disposal.
- If the Neck Bushing is damaged beyond repair, consider recycling the materials if possible.

Contact Information for Further Support

For any inquiries regarding safety or product concerns, please refer to the manufacturer's contact information provided with the product packaging or on the official website.

Thank you for your attention to these safety instructions. Your safety and satisfaction are our top priorities. Enjoy using your Neck Bushing responsibly!