

Reloading Die Spare Parts - Threaded Ring 1 1/4"

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Threaded ring 1 1/4", steel, blued and laser-marked – solid lock ring for precise adjustment of reloading dies in the press, incl. clamp screw.
Compatible with dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Threaded Ring 1 1/4"](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017829
- Mfr. No.: 3000270V
- Thread: 1 1/4
- Delivery weight: 0.08kg
- Shipping height: 15mm
- Shipping width: 50mm
- Shipping length: 50mm
- EAN/UPC: 3000270V

Table of Contents

- [Startpage](#)
- [Reloading Die Spare Parts Threaded Ring 1 1/4" Safety Instructions](#)
- [About Us](#)

Reloading Die Spare Parts Threaded Ring 1 1/4"

Safety Instructions

Introduction

Thank you for choosing the Reloading Die Spare Parts Threaded Ring 1 1/4". This product is designed to enhance your reloading experience by providing a solid lock ring for precise adjustment of reloading dies. To ensure safe and effective use, please follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always read and understand the safety instructions before using the product.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for wear and damage before use.
- Report any unsafe conditions or incidents to the appropriate authorities.
- Stay updated on product recalls and safety alerts via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use the threaded ring only with compatible dies from Triebel Waffenwerkzeuge.
- Ensure that the clamp screw is tightened securely before operating the reloading press.
- Avoid using excessive force when adjusting the lock ring to prevent damage.
- Do not modify or alter the product in any way.
- Wear appropriate safety gear, such as eye protection, when using reloading equipment.
- Be aware of your surroundings and ensure that no one is in close proximity when operating the reloading press.

Instructions for Installation and Usage

1. Installation:

- Ensure that the reloading press is turned off and unplugged before installation.
- Remove any existing lock ring from the die if applicable.
- Align the threaded ring with the die and screw it on until it is handtight.
- Use the clamp screw to secure the threaded ring in place. Ensure it is tightened adequately but do not overtighten.

2. Usage:

- Before operating the reloading press, doublecheck that the threaded ring is secure.
- Adjust the threaded ring as needed for your specific reloading requirements.
- After adjustments, ensure that the clamp screw is tightened to maintain the desired setting.
- Follow the manufacturer's instructions for operating the reloading press.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- If the product is damaged or no longer usable, consider recycling options if available.

Contact Information for Further Support

For any inquiries regarding safety or product support, please refer to the manufacturer's contact information included with your purchase.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk