

Reloading Die Spare Parts - Spring for BR dies 1 1/4"

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Spring for BR dies 1 1/4" made from high-quality spring steel - precision-manufactured for reliable function in bench rest reloading dies. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Spring for BR dies 1 1/4"](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017831
- Mfr. No.: 3999992V
- Thread: 1 1/4
- Delivery weight: 0.005kg
- Shipping height: 40mm
- Shipping width: 40mm
- Shipping length: 50mm
- EAN/UPC: 3999992V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Spring for BR Dies 1 1/4"](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Spring for BR Dies 1 1/4"

Introduction

Thank you for choosing the Reloading Die Spare Parts Spring for BR Dies 1 1/4". This guide provides essential safety instructions and usage information to ensure safe and effective use of the product. Please read this manual thoroughly before using the product.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose, which is as a spare part for bench rest reloading dies.
- Always inspect the spring for any visible damage before installation. Do not use if damaged.
- Keep the product out of reach of children and vulnerable individuals.
- Be aware of your surroundings and ensure that your work area is clean and free from hazards.
- Follow all local regulations and guidelines regarding the use of reloading equipment and components.

Specific Safety Precautions for Use

- Use protective eyewear when installing or using the reloading die to prevent injury from flying debris.
- Wear gloves to protect your hands from sharp edges and potential pinch points during installation.
- Ensure that the reloading die is securely mounted and stable before use.
- Do not exceed the manufacturer's specifications for pressure and load to avoid accidents or equipment failure.
- If you experience any malfunction or unusual behavior during use, cease operation immediately and inspect the equipment.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and safety equipment.
- Ensure that your workspace is organized and welllit.

2. Installation:

- Carefully remove the old spring from the reloading die, taking care to avoid damaging other components.
- Align the new spring with the designated slot in the reloading die.
- Gently press the spring into place until it is securely fitted. Ensure that it is seated correctly.
- Doublecheck that all components of the reloading die are properly assembled before use.

3. Usage:

- Follow the specific instructions for your reloading die model regarding operation.
- Monitor the performance of the reloading die during use, looking out for any irregularities or signs of wear.
- If you encounter any issues, stop using the equipment and consult a professional or refer to the product manual for troubleshooting.

Disposal Instructions

- Dispose of any old or damaged springs and packaging materials in accordance with local waste disposal regulations.
- Avoid disposing of the product in regular household waste if it contains materials that can be recycled or require special handling.

Contact Information for Further Support

For any inquiries or concerns regarding the product, please reach out to your local retailer or manufacturer. They can provide assistance and further information on safety practices and product support.

By adhering to these safety instructions, you can ensure a safe and effective reloading experience. Thank you for your attention to safety and for choosing the Reloading Die Spare Parts Spring for BR Dies 1 1/4".

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk