

Reloading Die Spare Parts - Spring for BR dies 1 1/2"

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Spring for BR dies 1 1/2" made from high-quality spring steel - precision-manufactured for reliable function in bench rest reloading dies. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Spring for BR dies 1 1/2"](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017832
- Mfr. No.: 3999993V
- Thread: 1 1/2
- Delivery weight: 0.005kg
- Shipping height: 60mm
- Shipping width: 60mm
- Shipping length: 50mm
- EAN/UPC: 3999993V

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Reloading Die Spare Parts Spring for BR Dies 1 1/2"](#)
- [About Us](#)

Safety Instruction Guide for Reloading Die Spare Parts Spring for BR Dies 1 1/2"

Introduction

Thank you for choosing the Reloading Die Spare Parts Spring for BR Dies 1 1/2". This product is designed to enhance the performance of your reloading equipment. Please read this safety instruction guide carefully to ensure safe and effective use of the product. This guide complies with the EU General Product Safety Regulation (GPSR) to protect your safety and wellbeing.

General Safety Guidelines

- Ensure that you are familiar with the operation of your reloading equipment before using this product.
- Always wear appropriate safety gear, including eye protection and gloves, when handling reloading dies and components.
- Keep the product and any reloading equipment out of reach of children and vulnerable individuals.
- Regularly check for wear and damage to the spring and other components to maintain safe operation.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Use the spring only with compatible BR dies 1 1/2" from Triebel Waffenwerkzeuge to avoid malfunction.
- Do not modify the spring or any part of the reloading die assembly.
- Ensure that the reloading press is securely mounted and stable before use.
- Avoid excessive force when installing or removing the spring to prevent injury or damage.
- Store the spring in a dry, cool place when not in use to prevent corrosion.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and safety equipment.
- Ensure your work area is clean and welllit.

2. Installation:

- Disconnect the reloading press from any power source if applicable.
- Remove the existing spring from the BR die assembly.
- Carefully install the new spring by aligning it with the designated slots in the die.
- Ensure that the spring is securely in place and that it moves freely.

3. Usage:

- Reconnect the reloading press if it was disconnected.
- Follow the manufacturer's instructions for operating the reloading press.
- Monitor the operation of the spring during use to ensure it functions properly.

4. PostUsage:

- After reloading, inspect the spring for any signs of wear or damage.
- Clean the area and store the spring properly.

Disposal Instructions

- Dispose of the spring and any related components in accordance with local regulations.
- Do not dispose of the spring in regular household waste if it contains hazardous materials.
- Consider recycling options for metal components where available.

Contact Information for Further Support

For any safety inquiries, concerns, or additional information regarding this product, please refer to the manufacturer's contact information provided with your product packaging. Ensure that you have the product details handy when seeking assistance.

By following these guidelines and instructions, you can ensure a safe and effective experience with your Reloading Die Spare Parts Spring for BR Dies 1 1/2". Thank you for your attention to safety and proper usage.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk