

GLOCK TRIGGERS - ALL GEN 3-4 GLOCK PISTOLS, BLACK PIVOTING SAFETY

The Timney Enhanced Feel Trigger Shoe was developed in response to shooters seeking a more comfortable, predictable trigger break without replacing the entire trigger mechanism. Engineered to preserve legendary Glock reliability, this shoe replaces only the factory trigger shoe, allowing you to fine-tune pre-travel/safety take-up for a crisp, enhanced shooting feel.



Enhanced Ergonomics and Control: Curved profile engineered to improve finger placement, making the wall and break feel smoother, more comfortable, and highly repeatable.

Adjustable Safety Take-Up: Features an adjustable mechanism allowing users to set preferred pre-travel movement for improved accuracy.

Preserved Factory Reliability: Upgrades the shooter interface while maintaining full compatibility with the factory Glock action and internal safety systems.

Two Safety Blade Styles: Choose between a traditional External Safety Blade or an Internal Pivoting (Hinged) Safety for a blade-free trigger face feel.

Precision CNC-Machined: Crafted from high-grade aluminum with a durable, corrosion-resistant anodized finish.

Broad Compatibility: Engineered to fit nearly all Glock handguns, from sub-compact carry pistols (e.g., G43/G43X/G48) up to full-size and large-frame models.

Easy DIY Installation: Simple drop-in upgrade using included hex tools; requires no gunsmithing.

Attributes

- Name: ALL GEN 3-4 GLOCK PISTOLS, BLACK PIVOTING SAFETY
- Manufacturer: TIMNEY
- Product no.: EU2018768
- Mfr. No.: GLOCK-PIVOT-EFT-3-4
- Weapon type: Glock
- Delivery weight: 0.09kg
- Shipping height: 51mm
- Shipping width: 102mm
- Shipping length: 191mm
- UPC: 081950338658

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for GLOCK TRIGGERS ALL GEN 34 GLOCK PISTOLS, BLACK PIVOTING SAFETY](#)

Safety Instruction Guide for GLOCK TRIGGERS ALL GEN 34 GLOCK PISTOLS, BLACK PIVOTING SAFETY

Introduction

Thank you for choosing the GLOCK TRIGGERS ALL GEN 34 GLOCK PISTOLS, BLACK PIVOTING SAFETY. This guide provides essential safety instructions to ensure safe and effective use of your product. Please read this document carefully before installation and use.

General Safety Guidelines

- **Product Safety:** This product is designed for safe use with all nonfood items. Always ensure that you follow the instructions to prevent any risks associated with misuse.
- **Enhanced Recalls:** Stay informed about product recalls. If a recall occurs, you will be notified with standardized notices and provided with remedies at no cost.
- **Online Shopping:** When purchasing online, ensure that the seller meets all safety requirements, just as you would expect in a physical store.
- **Special Consumer Focus:** Extra precautions are necessary when this product is used by vulnerable groups, including children. Keep all products out of reach of children.
- **EU Contact Point:** For any safety inquiries, please refer to the designated EU contact point associated with this product.
- **Rapid Alerts:** Stay updated on any unsafe products through the EU's Safety Gate system.

Specific Safety Precautions for Use

- **Read the Manual:** Always read this safety instruction guide before using the product.
- **Inspect Before Use:** Check the trigger shoe for any signs of damage or wear before installation.
- **Use Only with Compatible Models:** Ensure that your GLOCK pistol is compatible with the trigger shoe to avoid malfunctions.
- **Avoid Force:** Do not force the trigger shoe into place. Ensure it fits correctly without excessive pressure.
- **Regular Maintenance:** Regularly inspect the trigger mechanism for proper function and safety.
- **Training:** Familiarize yourself with the operation of your GLOCK pistol and the new trigger shoe before use.
- **Store Safely:** Always store your firearm and accessories in a secure location, away from children and unauthorized users.

Instructions for Installation and Usage

1. Preparation:

- Ensure your GLOCK pistol is unloaded.
- Gather the necessary tools, including the provided hex tools.

2. Installation:

- Remove the factory trigger shoe from your GLOCK pistol following the manufacturer's instructions.
- Align the Timney Enhanced Feel Trigger Shoe with the trigger mechanism.
- Gently slide the trigger shoe into place, ensuring it is properly seated.
- Use the included hex tools to secure the trigger shoe in place, ensuring it is snug but not overly tight.

3. Adjustment:

- Adjust the pretravel movement using the adjustable mechanism for your preferred feel.
- Test the trigger function without ammunition in a safe environment to ensure proper operation.

4. Usage:

- Practice with the new trigger shoe in a safe and controlled environment.
- Always follow standard firearm safety practices when handling your GLOCK pistol.

Disposal Instructions

- **Product Disposal:** When the trigger shoe reaches the end of its life or if you decide to replace it, dispose of it in accordance with local regulations.
- **Environmental Considerations:** Do not dispose of the product in regular household waste. Instead, seek out local recycling programs that accept metal components.

Contact Information for Further Support

For any questions or concerns regarding safety, installation, or usage of the GLOCK TRIGGERS ALL GEN 34 GLOCK PISTOLS, BLACK PIVOTING SAFETY, please refer to the official manufacturer's contact point for assistance.

Thank you for prioritizing safety and responsible use. Enjoy your enhanced shooting experience with your GLOCK pistol!