

Furiosa Chassis Remington 700 SA BDL Micarta

The WOOX Furiosa Chassis is a groundbreaking hybrid rifle stock designed for shooters and hunters who refuse to compromise between classic aesthetics and modern tactical performance. Engineered in Italy and crafted in the USA and Italy, the Furiosa combines hand-finished American Walnut (or dark Micarta) with a full-length, rigid aerospace-grade aluminum skeleton. The result is an ultra-stable bedding platform that dramatically enhances shot-to-shot consistency, recoil management,

Aerospace-Grade Aluminum Core: Built on a precision-machined AA 7075 aircraft-grade aluminum sub-chassis with hard anodizing. The metal bedding system eliminates accuracy loss caused by ambient humidity and temperature changes.

Micro-Adjustable Cheek Riser: Fine-tune your cheek weld effortlessly for perfect scope alignment without needing extra tools.

Adjustable Length of Pull (LOP): Rapidly adapt the LOP from 13.5" to 15" (34.3 cm – 38.1 cm) using a smooth push-button mechanism.

M-LOK® Forend: Three 7-inch M-LOK® accessory slots (at 3, 6, and 9 o'clock) for mounting bipods, tripods, or lights.

Integrated Picatinny Rail: Bottom-mounted rail section for monopods and rear support accessories.

QD Sling Mounts: Built-in Quick Detach sling swivel points for flexible carry options.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Furiosa Chassis Remington 700 SA BDL Micarta
- Manufacturer: WOOX
- Product no.: EU2018810
- Mfr. No.: SH.CHS013.01
- Colour: Micarta
- Model: 700
- Weapon type: Remington
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069393162

Table of Contents

- [Startpage](#)
- [English: WOOX Furiosa Chassis Safety Instructions](#)

WOOX Furiosa Chassis Safety Instructions

Introduction

Thank you for choosing the WOOX Furiosa Chassis for your Remington 700 SA BDL. This guide provides essential safety instructions to ensure the safe use and maintenance of your product. Please read this document carefully before using the chassis.

General Safety Guidelines

- Always follow local laws and regulations regarding firearm use and ownership.
- Ensure that the chassis is compatible with your firearm model before installation.
- Inspect the chassis for any damage before each use. Do not use if damaged.
- Keep the chassis and all firearms securely stored and out of reach of children.
- Always prioritize safety when handling firearms. Treat every firearm as if it is loaded.
- Be aware of your surroundings and ensure that you have a safe backstop when shooting.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- **Hazard Identification:** Potential hazards include accidental discharge, improper installation, and equipment failure.
- **Avoiding Accidental Discharge:**
 - Always ensure that the firearm is unloaded before attaching or detaching the chassis.
 - Keep fingers off the trigger until ready to shoot.
- **Installation Precautions:**
 - Follow the installation instructions carefully to avoid improper setup.
 - Use only the recommended tools for installation.
- **Using the MicroAdjustable Cheek Riser:**
 - Adjust the cheek riser only when the firearm is pointed in a safe direction.
 - Ensure the cheek riser is securely locked in place before use.
- **Adjustable Length of Pull (LOP):**
 - Make adjustments to the LOP only when the firearm is unloaded and pointed in a safe direction.
 - Confirm that the LOP is securely locked after adjustment.
- **MLOK® Forend Usage:**
 - Ensure that accessories mounted on the MLOK® slots are securely attached.
 - Do not exceed the weight limit of the MLOK® slots to avoid failure.
- **QD Sling Mounts:**
 - Regularly check the integrity of the sling mounts for wear or damage.
 - Ensure that slings are properly attached to prevent accidental detachment.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove the original stock from your Remington 700 SA BDL according to the manufacturer's instructions.
- Align the action of the firearm with the WOOX Furiosa Chassis.
- Securely attach the chassis using the provided hardware, ensuring all screws are tightened according to specifications.
- Install any desired accessories, ensuring they are compatible and securely attached.

2. Usage:

- Before shooting, check that all adjustments (cheek riser, LOP) are secure.
- Always use the chassis in conjunction with proper shooting practices.
- Store the chassis in a dry place to prevent moisture damage.

Disposal Instructions

- Dispose of the WOOX Furiosa Chassis in accordance with local regulations regarding electronic waste and materials.
- Do not dispose of the product in regular household waste. Check for local recycling programs that accept aluminum and composite materials.
- If the product is damaged beyond repair, contact your local waste management facility for proper disposal methods.

Contact Information for Further Support

For further support, please refer to the manufacturer's website or contact your local dealer for assistance. Ensure you have the product details ready for any inquiries.

Thank you for your attention to these safety instructions. Your safety and the safety of those around you is our top priority. Enjoy your shooting experience with the WOOX Furiosa Chassis.