

Furiosa Chassis Ruger 10/22 10/22 DBM Micarta

The WOOX Furiosa Chassis is a groundbreaking hybrid rifle stock designed for shooters and hunters who refuse to compromise between classic aesthetics and modern tactical performance. Engineered in Italy and crafted in the USA and Italy, the Furiosa combines hand-finished American Walnut (or dark Micarta) with a full-length, rigid aerospace-grade aluminum skeleton. The result is an ultra-stable bedding platform that dramatically enhances shot-to-shot consistency, recoil management,

Aerospace-Grade Aluminum Core: Built on a precision-machined AA 7075 aircraft-grade aluminum sub-chassis with hard anodizing. The metal bedding system eliminates accuracy loss caused by ambient humidity and temperature changes.

Micro-Adjustable Cheek Riser: Fine-tune your cheek weld effortlessly for perfect scope alignment without needing extra tools.

Adjustable Length of Pull (LOP): Rapidly adapt the LOP from 13.5" to 15" (34.3 cm – 38.1 cm) using a smooth push-button mechanism.

M-LOK® Forend: Three 7-inch M-LOK® accessory slots (at 3, 6, and 9 o'clock) for mounting bipods, tripods, or lights.

Integrated Picatinny Rail: Bottom-mounted rail section for monopods and rear support accessories.

QD Sling Mounts: Built-in Quick Detach sling swivel points for flexible carry options.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Furiosa Chassis Ruger 10/22 10/22 DBM Micarta
- Manufacturer: WOOX
- Product no.: EU2018840
- Mfr. No.: SH.CHS013.13
- Colour: Micarta
- Model: 10/22
- Weapon type: Ruger
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069393384

Table of Contents

- [Startpage](#)
- [English: WOOX Furiosa Chassis Safety Instruction Guide](#)

WOOX Furiosa Chassis Safety Instruction Guide

Introduction

Thank you for choosing the WOOX Furiosa Chassis for your Ruger 10/22. This product combines classic aesthetics with modern tactical performance, designed to enhance your shooting experience. To ensure your safety and the optimal performance of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Ensure the firearm is pointed in a safe direction at all times.
- Be aware of your surroundings and ensure a clear shooting area.
- Use appropriate safety gear, including eye and ear protection.
- Store the chassis and firearm securely to prevent unauthorized access, especially from children.
- Regularly inspect the chassis for any signs of wear or damage before use.

Specific Safety Precautions for Use

- **Hazard Identification:**
 - Improper handling or installation may lead to accidental discharge.
 - Failure to secure the chassis may result in instability during shooting.
- **Avoiding Hazards:**
 - Always ensure the firearm is unloaded before attaching or detaching the chassis.
 - Do not exceed the recommended length of pull adjustments.
 - Ensure that all accessories are securely mounted to avoid detachment during use.
- **Age Specific Warnings:**
 - This product is not intended for use by individuals under the age of 18 without adult supervision.
 - Ensure that inexperienced users are guided by knowledgeable adults when using this product.

Instructions for Installation and Usage

- **Installation:**
 1. Ensure the firearm is unloaded and in a safe area.
 2. Carefully attach the Furiosa Chassis to the Ruger 10/22 following the manufacturer's guidelines.
 3. Confirm that all screws and attachments are tightened securely.
- **Adjustments:**
 - **Length of Pull (LOP):**
 - Use the pushbutton mechanism to adjust the LOP from 13.5" to 15" (34.3 cm – 38.1 cm) as needed.
 - Ensure the adjustment is fully engaged before use.
 - **Cheek Riser:**
 - Adjust the microadjustable cheek riser to achieve the desired cheek weld.
 - Ensure it is securely locked in place before shooting.

- **Accessory Attachment:**

- Attach accessories using the MLOK® slots and ensure they are properly secured.
- Use the integrated Picatinny rail for additional support accessories.

- **Usage:**

- Always check the stability of the chassis before firing.
- Maintain a proper shooting stance to ensure control and stability.
- Regularly clean and maintain the chassis to ensure optimal performance.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the chassis with regular household waste.
- Contact local waste management authorities for guidance on proper disposal methods.

Contact Information for Further Support

For any safety inquiries or support related to the WOOX Furiosa Chassis, please consult the manufacturer or your local dealer. Ensure that you have the product details ready when seeking assistance.

By following these safety instructions, you can ensure a safe and enjoyable shooting experience with your WOOX Furiosa Chassis. Always prioritize safety and responsible handling of your firearm.