

Furiosa Chassis - WOOX Furiosa Ultra - PRS Chassis Remington 700 SA AICS Walnut

The WOOX Furiosa Chassis is a groundbreaking hybrid rifle stock designed for shooters and hunters who refuse to compromise between classic aesthetics and modern tactical performance. Engineered in Italy and crafted in the USA and Italy, the Furiosa combines hand-finished American Walnut (or dark Micarta) with a full-length, rigid aerospace-grade aluminum skeleton. The result is an ultra-stable bedding platform that dramatically enhances shot-to-shot consistency, recoil management,

Aerospace-Grade Aluminum Core: Built on a precision-machined AA 7075 aircraft-grade aluminum sub-chassis with hard anodizing. The metal bedding system eliminates accuracy loss caused by ambient humidity and temperature changes.

Micro-Adjustable Cheek Riser: Fine-tune your cheek weld effortlessly for perfect scope alignment without needing extra tools.

Adjustable Length of Pull (LOP): Rapidly adapt the LOP from 13.5" to 15" (34.3 cm - 38.1 cm) using a smooth push-button mechanism.

M-LOK® Forend: Three 7-inch M-LOK® accessory slots (at 3, 6, and 9 o'clock) for mounting bipods, tripods, or lights.

Integrated Picatinny Rail: Bottom-mounted rail section for monopods and rear support accessories.

QD Sling Mounts: Built-in Quick Detach sling swivel points for flexible carry options.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Furiosa Ultra - PRS Chassis Remington 700 SA AICS Walnut
- Manufacturer: WOOX
- Product no.: EU2018841
- Mfr. No.: SH.CHS021.05
- Colour: Walnut
- Model: 700
- Weapon type: Remington
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069392097

Table of Contents

- [Startpage](#)
- [English: WOOX Furiosa Chassis Safety Instruction Guide](#)

WOOX Furiosa Chassis Safety Instruction Guide

Introduction

Thank you for choosing the WOOX Furiosa Chassis, a revolutionary hybrid rifle stock designed for shooters and hunters who value both classic aesthetics and modern tactical performance. This guide provides important safety instructions and guidelines to ensure the safe and effective use of your product in compliance with EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Ensure the rifle is pointed in a safe direction at all times.
- Use appropriate eye and ear protection when shooting.
- Keep the WOOX Furiosa Chassis and all firearms out of reach of children and unauthorized users.
- Regularly inspect the chassis for any signs of wear or damage.
- Follow all local laws and regulations regarding firearms and their accessories.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

- **Recoil Management:** Ensure that your grip and stance are appropriate to manage recoil effectively. The chassis is designed to enhance stability, but proper technique is essential.
- **Cheek Riser Adjustment:** Adjust the microadjustable cheek riser carefully to avoid pinching or injury. Ensure it is securely locked in place before use.
- **Length of Pull Adjustment:** When adjusting the Length of Pull (LOP), ensure that your fingers are clear of the mechanism to prevent injury.
- **MLOK® Forend Usage:** Only use accessories that are compatible with the MLOK® system. Ensure all attachments are securely mounted before use.
- **Sling Mounts:** Check that the Quick Detach sling swivel points are properly engaged before carrying the firearm.
- **Environmental Considerations:** Avoid exposing the chassis to extreme temperatures or moisture, which may affect performance.

Instructions for Installation and Usage

1. Installation of the Chassis:

- Ensure your Remington 700 SA rifle is unloaded.
- Remove the original stock from the rifle according to the manufacturer's instructions.
- Align the WOOX Furiosa Chassis with the action of your rifle.
- Securely attach the chassis to the rifle using the provided hardware, ensuring all screws are tightened to the manufacturer's specifications.

2. Adjusting the Cheek Riser:

- Locate the adjustment mechanism on the cheek riser.
- Release the locking mechanism and slide the riser to the desired height.
- Relock the mechanism to secure the riser in place.

3. Adjusting the Length of Pull (LOP):

- Press the pushbutton mechanism to adjust the LOP.
- Extend or retract the stock to achieve the desired length.

- Ensure the mechanism clicks into place, indicating it is locked.

4. Attaching Accessories:

- For MLOK® attachments, slide the accessory into the slot and secure it using the appropriate screws.
- For the Picatinny rail, align the accessory and tighten the screws firmly.

5. Using the Chassis:

- Ensure that all adjustments are secure before taking your rifle to the range or field.
- Practice safe handling and shooting techniques at all times.

Disposal Instructions

- Dispose of the WOOX Furiosa Chassis in accordance with local regulations regarding electronic and nonelectronic waste.
- If the chassis is damaged or no longer usable, consider recycling the materials where possible.
- Do not dispose of the chassis in regular household waste.

Contact Information for Further Support

- For any safety inquiries or support regarding the WOOX Furiosa Chassis, please reach out to the designated contact point provided by the manufacturer.

Thank you for your attention to these safety instructions. Enjoy your shooting experience with the WOOX Furiosa Chassis while prioritizing safety and compliance with regulations.