

Forty-Seven - Grip AK-47 Grip Walnut

The WOOX Forty Seven Grip is part of WOOX's high-end furniture series specifically designed for AK-47 / AKM / AK-74 pattern rifles. It replaces standard plastic or surplus wooden pistol grips with a hand-finished, ergonomically sculpted American Walnut grip. Material: 100% genuine American Walnut with precision laser checkering for enhanced palm traction in dirt or wet conditions. Ergonomics: Ambidextrous, palm-filling contour designed for a natural wrist angle compared to traditional blocky AK grips.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Forty-Seven - Grip AK-47 Grip Walnut
- Manufacturer: WOOX
- Product no.: EU2019169
- Mfr. No.: SH.GRP122.01
- Colour: Walnut
- Model: AK-47
- Weapon type: AK-47
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069397535

Table of Contents

- [Startpage](#)
- [English: WOOX FortySeven Grip Safety Instruction Guide](#)

WOOX FortySeven Grip Safety Instruction Guide

Introduction

Thank you for choosing the WOOX FortySeven Grip, designed specifically for AK47 / AKM / AK74 pattern rifles. This guide provides important safety information to ensure the safe use and installation of your new grip. Please read this document carefully to understand the safety precautions and usage instructions.

General Safety Guidelines

- Ensure that you comply with all local laws and regulations regarding firearms and accessories.
- Always handle firearms responsibly and safely.
- Before installation, ensure the firearm is unloaded and pointed in a safe direction.
- Keep the grip out of reach of children and vulnerable individuals.
- Regularly inspect the grip for any signs of wear or damage.
- If you notice any defects or issues, discontinue use immediately and seek assistance.

Specific Safety Precautions for Use

- Only use the WOOX FortySeven Grip on compatible AK47 / AKM / AK74 pattern rifles.
- Ensure that the grip is securely attached before using the firearm.
- Avoid exposure to extreme temperatures, moisture, or harsh chemicals that may damage the grip.
- If using the grip in wet conditions, ensure proper drying after use to maintain grip integrity.
- Do not modify or alter the grip in any way, as this may compromise safety and performance.

Instructions for Installation and Usage

1. Preparation:

- Ensure your firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation (e.g., screwdriver).

2. Installation Steps:

- Remove the existing grip from the firearm by unscrewing it from the lower receiver.
- Align the WOOX FortySeven Grip with the mounting points on the firearm.
- Secure the grip in place using the screws provided, ensuring a tight fit without overtightening.
- Check that the grip is firmly attached and does not wobble.

3. Usage:

- Hold the firearm with the WOOX FortySeven Grip, ensuring your fingers are clear of the trigger until ready to shoot.
- Maintain a firm grip on the firearm, especially in adverse conditions.
- Always practice safe shooting habits and be aware of your surroundings.

Disposal Instructions

- Dispose of the WOOX FortySeven Grip in accordance with local waste disposal regulations.
- Do not dispose of the grip in regular household waste if it shows signs of damage or hazardous materials.
- Consider recycling options if available.

Contact Information for Further Support

For any safety inquiries or further assistance regarding the WOOX FortySeven Grip, please refer to the contact information provided with your product packaging or visit the official WOOX website.

By following these safety instructions, you can ensure a safe and enjoyable experience with your WOOX FortySeven Grip. Thank you for your attention to safety.