

1913 - WOODY Stock 1913 Fixed Walnut

The 1913 Woody Stock takes WOOX's full-profile wooden chassis stock design and integrates a direct M1913 Picatinny rail mount. This allows firearms with a rear Picatinny rail interface to feature a classic, comfortable walnut stock setup without needing platform-specific rear trunnions or receiver tangs.

Mounting Interface: Clamps directly to any standard M1913 Picatinny rear rail

via an integrated hard-anodized aluminum hinge/clamp block. Stock

Construction: Solid American Walnut outer shell built over an internal

aluminum spine for maximum rigidity. Ergonomics and Ergonomic

Adjustability: Cheek Riser: Built-in adjustable cheek comb to get proper eye

alignment with optics mounted on top rails. Recoil Pad: Soft, non-slip Microcell

rubber pad to absorb felt recoil. Sling Attachment: Dual-sided Quick Detach

(QD) sockets for ambidextrous sling mounting.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX 1913 - WOODY Stock 1913 Fixed Walnut
- Manufacturer: WOOX
- Product no.: EU2019176
- Mfr. No.: SH.STK152.01
- Colour: Walnut
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069397566

Table of Contents

- [Startpage](#)
- [English: WOOX 1913 Woody Stock Safety Instruction Guide](#)

WOOX 1913 Woody Stock Safety Instruction Guide

Introduction

Thank you for choosing the WOOX 1913 Woody Stock. This product is designed to enhance your shooting experience while ensuring safety and comfort. Please read this safety instruction guide carefully to understand how to use and maintain your Woody Stock safely.

General Safety Guidelines

- Always follow the manufacturer's instructions for the installation and use of the WOOX 1913 Woody Stock.
- Ensure that your firearm is unloaded before attaching or detaching the stock.
- Keep the stock and firearm out of reach of children and unauthorized users.
- Regularly inspect the stock for any signs of wear or damage. Do not use the stock if it is damaged.
- Be aware of your surroundings and ensure that you are in a safe environment when handling firearms.
- Always wear appropriate safety gear, including eye and ear protection, when shooting.

Specific Safety Precautions for Use

- **Hazard Identification:**
 - Improper installation may lead to stock failure, which could cause injury.
 - Misalignment of the cheek riser may affect your aim and lead to accidents.
- **Avoiding Hazards:**
 - Follow the installation instructions meticulously to ensure a secure fit.
 - Adjust the cheek riser for proper eye alignment before taking any shots.
 - Make sure the recoil pad is securely attached to absorb felt recoil effectively.
- **Age Specific Warnings:**
 - This product is intended for adult use only. Keep it away from children.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Align the Woody Stock with the rear Picatinny rail on your firearm.
- Clamp the stock securely to the rail using the integrated hardanodized aluminum hinge/clamp block.
- Doublecheck that the stock is firmly attached before proceeding.

2. Usage:

- Adjust the cheek riser for proper eye alignment with any optics mounted on the top rails.
- Ensure the recoil pad is in place to absorb felt recoil during shooting.
- Use the dualsided Quick Detach (QD) sockets for ambidextrous sling mounting as needed.

Disposal Instructions

- Dispose of the WOOX 1913 Woody Stock in accordance with local regulations.
- Do not dispose of the stock in regular household waste. Check for recycling options in your area.

Contact Information for Further Support

For any inquiries regarding safety or product information, please consult the manufacturer's website or contact your local dealer.

Thank you for prioritizing safety while using your WOOX 1913 Woody Stock. Enjoy your shooting experience responsibly!