

1913 - EDGE Stock 1913 Folding Walnut/Aluminum

[Rifle Parts](#) > [Stock Parts](#) > [Buttstocks](#)

The WOOX 1913 Edge Stock seamlessly merges modern tactical design with traditional Italian craftsmanship. Precision-machined from aerospace-grade aluminum and accented with hand-selected American Walnut, this stock upgrades your build with exceptional strength, lightweight handling, and a distinctive, timeless finish.

Featuring a standard 1913 Picatinny mounting interface, it attaches easily to any rifle receiver or adapter equipped with an M1913 rail.

Key Features and Highlights

Heritage Meets Innovation:

High-strength aerospace aluminum paired with rich American Walnut accents. The wood components provide an elegant aesthetic while remaining temperature-neutral for superior cheek-weld comfort in extreme cold or heat.

Fixed or Folding Configurations:

Available in both Fixed and Folding models, allowing you to tailor your rifle to your specific transport and shooting requirements.

Adjustable Cheek Riser:

The American Walnut cheek piece can be adjusted to two elevated positions for optimal eye-line alignment with optics and red dots.

Integrated M-LOK® Slots:

Features a 3-slot M-LOK® rail design on both sides of the stock for seamless mounting of accessories.

NO IMAGE
AVAILABLE

Attributes

- Name: [WOOX 1913 - EDGE Stock 1913 Folding Walnut/Aluminum](#)
- Manufacturer: [WOOX](#)
- Product no.: EU2019179
- Mfr. No.: SH.STK152.04
- Colour: Walnut
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069397597

Table of Contents

- [Startpage](#)
- [WOOX 1913 EDGE Stock 1913 Folding Walnut/Aluminum Safety Instructions](#)
- [About Us](#)

WOOX 1913 EDGE Stock 1913 Folding Walnut/Aluminum Safety Instructions

Introduction

Thank you for choosing the WOOX 1913 EDGE Stock. This product combines modern tactical design with traditional craftsmanship to enhance your rifle experience. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- **Product Safety:** Ensure safe use of the WOOX 1913 EDGE Stock by following all instructions provided. The product has been designed to meet safety standards, but misuse can lead to accidents.
- **Enhanced Recalls:** Stay informed about any recalls related to this product. If a recall is issued, follow the instructions provided to remedy the situation.
- **Online Shopping Safety:** If purchased online, ensure that the retailer complies with safety requirements. Check for product safety certifications.
- **Special Consumer Focus:** This product is not intended for use by children. Keep out of reach of minors.
- **EU Contact Point:** For any safety inquiries, please reach out to the designated EU contact point associated with this product.
- **Rapid Alerts:** Monitor updates on unsafe products through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Proper Handling:** Always handle the stock with care. Avoid dropping or striking it against hard surfaces.
- **Installation:** Ensure the stock is installed correctly to prevent accidents during use. Follow the installation instructions provided.
- **Maintenance:** Regularly check the stock for signs of wear or damage. Do not use if any part is compromised.
- **Usage Conditions:** Avoid using the product in extreme weather conditions that may affect performance.
- **Shooting Safety:** Always follow general firearm safety rules when using your rifle with the WOOX 1913 EDGE Stock.

Instructions for Installation and Usage

1. Unboxing:

- Carefully remove the WOOX 1913 EDGE Stock from its packaging.
- Inspect the product for any visible damage or missing parts.

2. Installation:

- Ensure your rifle is unloaded before starting the installation.
- Locate the standard 1913 Picatinny mounting interface on your rifle.
- Align the stock with the rail and slide it into position.
- Secure the stock using the appropriate screws or clamps provided.
- Doublecheck that the stock is firmly attached and does not wobble.

3. Adjustments:

- To adjust the cheek riser, loosen the adjustment screws and move the cheek piece to the desired height.
- Tighten the screws once the desired position is achieved.

4. Usage:

- When using the rifle, ensure a proper cheek weld for accuracy.
- Be aware of the stock's folding mechanism if applicable; ensure it is locked in place during use.

5. PostUse Care:

- After use, clean the stock with a soft cloth to remove dirt and moisture.
- Store the rifle in a safe, dry place, ensuring the stock is protected from potential damage.

Disposal Instructions

- When disposing of the WOOX 1913 EDGE Stock, please follow local regulations regarding the disposal of aluminum and wood products.
- If the product is no longer usable, consider recycling materials where possible.
- Do not dispose of the product in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the WOOX 1913 EDGE Stock, please refer to the contact information provided by your retailer or the manufacturer.

By following these safety instructions, you can ensure a safe and enjoyable experience with your WOOX 1913 EDGE Stock. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk