

Rifle Accessories - WOOX 2-Way Vertical & Horizontal Adj. Recoil Pad - D-Shape Rifle accessory

Function: Adds vertical position adjustment to the recoil pad, allowing shooters to raise or lower the pad relative to the stock axis for ideal shoulder pocket placement and cheek weld alignment.

Recoil Management: Built with high-density, shock-absorbing material to cushion impact, reduce felt recoil, and help maintain sight picture during rapid follow-up shots.

Adjustability: Features an integrated vertical sliding mechanism that locks securely at the desired height setting to accommodate different shooting positions (prone, bench, or standing) and body builds.

Compatibility: Engineered specifically for WOOX modular stock and chassis systems equipped with adjustable buttplate interfaces.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX 2-Way Vertical & Horizontal Adj. Recoil Pad - D-Shape Rifle accessory
- Manufacturer: WOOX
- Product no.: EU2019236
- Mfr. No.: SH.RCP003.01
- Colour: Black
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069391601

Table of Contents

- [Startpage](#)
- [English: WOOX Rifle Accessories Safety Instruction Guide](#)

WOOX Rifle Accessories Safety Instruction Guide

Introduction

Thank you for choosing the WOOX 2Way Vertical & Horizontal Adjustable Recoil Pad. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of this product. Please read this document carefully before installation and use.

General Safety Guidelines

- Ensure the product is compatible with your WOOX modular stock and chassis systems.
- Always inspect the recoil pad for any damage or wear before use.
- Use the recoil pad only for its intended purpose, as described in this guide.
- Keep the recoil pad out of reach of children and vulnerable individuals.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- **Avoid Excessive Force:** Do not apply excessive force when adjusting the height of the recoil pad, as this may cause damage to the locking mechanism.
- **Proper Fit:** Ensure the recoil pad fits securely against the stock to prevent movement during use.
- **Check Alignment:** Regularly check the alignment of the recoil pad with your shoulder pocket and cheek weld to maintain optimal shooting posture.
- **Wear Protective Gear:** Always wear appropriate eye and ear protection when using firearms equipped with the recoil pad.

Instructions for Installation and Usage

1. Installation:

- Remove the existing recoil pad from your rifle stock if applicable.
- Align the WOOX recoil pad with the stock interface, ensuring it fits securely.
- Use the provided screws or locking mechanism to attach the recoil pad firmly to the stock.
- Adjust the height of the recoil pad using the integrated vertical sliding mechanism. Ensure it locks securely at the desired height.

2. Usage:

- Before shooting, ensure that the recoil pad is properly adjusted for your body size and shooting position (prone, bench, or standing).
- Maintain a firm grip on the rifle while shooting to absorb recoil effectively.
- After each shooting session, inspect the recoil pad for any signs of wear or damage.

Disposal Instructions

- Dispose of the recoil pad in accordance with local regulations regarding plastic and rubber waste.
- Do not dispose of the product in regular household waste. Check for recycling options in your area.

Contact Information for Further Support

For any questions or concerns regarding the WOOX 2Way Vertical & Horizontal Adjustable Recoil Pad, please refer to the manufacturer's website or contact your local WOOX dealer for assistance.

Thank you for your attention to these safety guidelines. Enjoy your shooting experience with the WOOX recoil

pad!