

Rifle Accessories - WOOX WOOX Bag Rider Rifle accessory Walnut

Function: Attaches to the bottom rear of the stock to provide a smooth, flat surface for riding on a rear shooting bag, facilitating subtle elevation adjustments and smoother tracking during recoil.

Construction and Finish: CNC-machined from high-grade aircraft aluminum for maximum rigidity, finished with a durable, weather-resistant coating that glides easily against bag material.

Design and Fit: Engineered with an angled/sloped profile that allows micro-adjustments in target alignment simply by sliding the rear bag forward or backward.

Compatibility: Designed specifically for WOOX precision chassis systems, such as the Furiosa and Furiosa Ultra stock setups.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX WOOX Bag Rider Rifle accessory Walnut
- Manufacturer: WOOX
- Product no.: EU2019246
- Mfr. No.: SH.BGR002.01
- Colour: Walnut
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069391632

Table of Contents

- [Startpage](#)
- [English: WOOX Bag Rider Rifle Accessory Safety Instructions](#)

WOOX Bag Rider Rifle Accessory Safety Instructions

Introduction

Thank you for choosing the WOOX Bag Rider Rifle Accessory. This product is designed to enhance your shooting experience by providing a stable and adjustable platform for rear shooting bags. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Always ensure that the WOOX Bag Rider is securely attached to your rifle stock before use.
- Inspect the product for any damage or wear before each use. Do not use if damaged.
- Keep the product out of reach of children and unauthorized users.
- Use the product only with WOOX precision chassis systems, such as the Furiosa and Furiosa Ultra stock setups.
- Be aware of your surroundings and ensure a clear shooting area before use.
- Follow all local laws and regulations regarding the use of firearms and shooting accessories.

Specific Safety Precautions for Use

- Ensure that the rifle is unloaded when attaching or adjusting the Bag Rider.
- Avoid placing excessive weight on the Bag Rider while in use to prevent instability.
- Use the Bag Rider only for its intended purpose: to provide a stable surface for rear shooting bags.
- Do not modify or alter the Bag Rider in any way, as this may compromise safety.
- If you experience any issues with the product during use, stop using it immediately and consult a qualified professional.

Instructions for Installation and Usage

1. Installation:

- Ensure the rifle is pointed in a safe direction and is unloaded.
- Locate the bottom rear of the stock on your WOOX chassis system.
- Align the WOOX Bag Rider with the mounting area.
- Securely attach the Bag Rider using the provided hardware, ensuring it is tightly fastened.

2. Usage:

- Position your rear shooting bag on the Bag Rider.
- Adjust the position of the rear bag by sliding it forward or backward for microadjustments in target alignment.
- Maintain a firm grip on the rifle while shooting to manage recoil effectively.

Disposal Instructions

- Dispose of the WOOX Bag Rider in accordance with local regulations for metal and plastic waste.
- Do not dispose of the product in regular household waste.
- If the product is damaged beyond repair, please recycle it responsibly.

Contact Information for Further Support

For any inquiries or concerns regarding the WOOX Bag Rider Rifle Accessory, please contact your local WOOX representative or visit the official WOOX website for more information.

Thank you for your attention to these safety instructions. Enjoy your shooting experience with the WOOX Bag Rider Rifle Accessory!