

Blades Accessories - WOOX AX1 Genuine Leather Blade Sheath Axe accessory Sheath / Axe AX1 Axe

Fit and Design: Form-fitted specifically for the dual-head profile of the WOOX AX1, providing full coverage for the bit.

Secure Closure: Heavy-duty snap-button straps lock the sheath tightly over the axe head to prevent slippage during travel.

Reinforced Structure: Heavy stitching combined with solid brass/metal rivets at high-stress points ensures long-term field durability and safe edge retention.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX AX1 Genuine Leather Blade Sheath Axe accessory Sheath / Axe AX1 Axe
- Manufacturer: WOOX
- Product no.: EU2019291
- Mfr. No.: BU.SHT002.01
- Colour: Black
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069390963

Table of Contents

- [Startpage](#)
- [English: WOOX AX1 Genuine Leather Blade Sheath Safety Instructions](#)

WOOX AX1 Genuine Leather Blade Sheath Safety Instructions

Introduction

Thank you for choosing the WOOX AX1 Genuine Leather Blade Sheath. This product is designed to provide safe and secure storage for your WOOX AX1 axe. To ensure your safety and the longevity of the product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always inspect the sheath before use to ensure it is in good condition.
- Keep the sheath away from moisture to prevent damage to the leather.
- Store the sheath in a cool, dry place when not in use.
- Do not use the sheath for any purpose other than storing the WOOX AX1 axe.
- Ensure that the axe is clean and dry before placing it in the sheath.
- Keep the sheath out of reach of children and vulnerable individuals.

Specific Safety Precautions for Use

- Ensure the snapbutton straps are securely fastened before transporting the axe.
- Avoid placing excessive weight on the sheath, as it may compromise its structure.
- Do not expose the sheath to extreme temperatures or direct sunlight for prolonged periods.
- Regularly check for wear and tear, particularly at highstress points, to ensure continued safety.
- If the sheath shows signs of damage, discontinue use and replace it immediately.

Instructions for Installation and Usage

1. Fitting the Axe:

- Open the snapbutton straps of the sheath.
- Carefully insert the WOOX AX1 axe into the sheath, ensuring that the blade is fully covered.
- Close the snapbutton straps securely over the axe head.

2. Transporting the Axe:

- Always ensure that the sheath is securely closed before moving the axe.
- Carry the axe in an upright position to prevent accidental contact with the blade.

3. Maintenance:

- Clean the sheath with a damp cloth to remove dirt and debris.
- For leather care, apply a suitable leather conditioner periodically to maintain flexibility and prevent cracking.
- Store the sheath in a ventilated area to allow moisture to evaporate.

Disposal Instructions

- When the sheath is no longer usable, dispose of it in accordance with local regulations for leather and textile waste.
- Do not burn the sheath, as it may release harmful substances.

Contact Information for Further Support

For any inquiries regarding safety, usage, or product concerns, please refer to the contact information provided with your product packaging or visit the manufacturer's official website.

Thank you for your attention to these safety instructions. Enjoy the reliable protection and functionality of your WOOX AX1 Genuine Leather Blade Sheath.