

Blades Accessories - WOOX Volante Axe Handle - Wood Logo Axe Handle Axe accessory Hickory

Material: Crafted from premium Appalachian American Hickory, known for its extreme strength, natural shock absorption, and resistance to impact.

Ergonomic Design: Shaped for a balanced, comfortable grip that reduces hand fatigue during extended chopping, splitting, or throwing sessions.

Precision Fit: Specially contoured to fit the eye of the WOOX Volante head seamlessly for straightforward re-handling.

Finish: Pre-finished and weather-treated for optimal durability in outdoor environments.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Volante Axe Handle - Wood Logo Axe Handle Axe accessory Hickory
- Manufacturer: WOOX
- Product no.: EU2019294
- Mfr. No.: BU.AXE002.01HND
- Colour: Black
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069391403

Table of Contents

- [Startpage](#)
- [English: WOOX Volante Axe Handle Safety Instructions](#)

WOOX Volante Axe Handle Safety Instructions

Introduction

Thank you for choosing the WOOX Volante Axe Handle. This product is designed to provide you with a reliable and ergonomic tool for chopping, splitting, and throwing. To ensure your safety and the longevity of the axe handle, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always inspect the axe handle for any damage before use.
- Keep the axe handle away from children and pets.
- Use the axe handle only for its intended purpose.
- Store the axe handle in a dry place to prevent damage.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Check the EU Safety Gate platform for any recall updates related to this product.

Specific Safety Precautions for Use

- Ensure that the axe head is securely attached to the handle before use.
- Wear appropriate protective gear, including gloves and safety glasses.
- Stand with your feet shoulderwidth apart for better balance.
- Always chop or split wood away from your body.
- Avoid using the axe handle in wet conditions to reduce the risk of slipping.
- Do not use the axe handle if you are tired or under the influence of drugs or alcohol.
- If the axe handle becomes damaged during use, stop using it immediately and inspect for any issues.

Instructions for Installation and Usage

1. Installation of the Axe Head:

- Ensure that the axe head is compatible with the WOOX Volante Axe Handle.
- Align the axe head with the eye of the handle.
- Gently tap the axe head onto the handle using a mallet until it fits snugly.
- Check that the axe head is securely attached before use.

2. Using the Axe Handle:

- Grip the axe handle firmly with both hands.
- Position your dominant hand near the bottom of the handle and your other hand further up for better control.
- Swing the axe with a smooth motion, using your legs and hips for added power.
- Follow through with your swing, ensuring that you maintain control of the axe.

3. PostUse Care:

- Clean the axe handle with a damp cloth after use to remove any dirt or sap.
- Store the axe handle in a safe location, away from moisture and direct sunlight.
- Periodically check the handle for any signs of wear or damage.

Disposal Instructions

When the WOOX Volante Axe Handle reaches the end of its usable life, please dispose of it responsibly.

- Check local regulations for proper disposal methods.
- If the handle is made of wood, consider composting it if it is free from any harmful chemicals or treatments.
- Do not burn the handle unless it is confirmed safe to do so.

Contact Information for Further Support

For any inquiries regarding the safety of this product or to report an unsafe condition, please reach out to your local EU contact point. Ensure you have your product details available for reference.

Thank you for your attention to these safety instructions. Enjoy using your WOOX Volante Axe Handle responsibly!