

Blades Accessories - WOOX Volante Axe Handle - White Logo Axe Handle Axe accessory Hickory

Material: Crafted from premium Appalachian American Hickory, known for its extreme strength, natural shock absorption, and resistance to impact.

Ergonomic Design: Shaped for a balanced, comfortable grip that reduces hand fatigue during extended chopping, splitting, or throwing sessions.

Precision Fit: Specially contoured to fit the eye of the WOOX Volante head seamlessly for straightforward re-handling.

Finish: Pre-finished and weather-treated for optimal durability in outdoor environments.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Volante Axe Handle - White Logo Axe Handle Axe accessory Hickory
- Manufacturer: WOOX
- Product no.: EU2019295
- Mfr. No.: BU.AXE002.02HND
- Colour: Black
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069391410

Table of Contents

- [Startpage](#)
- [English: WOOX Volante Axe Handle Safety Instructions](#)

WOOX Volante Axe Handle Safety Instructions

Introduction

Thank you for choosing the WOOX Volante Axe Handle. This safety instruction guide provides essential information to ensure safe and effective use of your axe handle. Please read this guide carefully before using the product.

General Safety Guidelines

- Always inspect the axe handle before each use for any signs of damage or wear.
- Ensure that the axe head is securely attached to the handle before use.
- Use the axe handle only for its intended purpose, which is to be used with the WOOX Volante axe head.
- Keep the axe handle out of reach of children and vulnerable individuals.
- Do not use the axe handle if you are under the influence of drugs or alcohol.
- Wear appropriate personal protective equipment (PPE) such as gloves and safety goggles while using the axe.
- Be aware of your surroundings and ensure that no one is in close proximity when chopping, splitting, or throwing.

Specific Safety Precautions for Use

- Ensure a stable and secure grip on the axe handle during use to prevent slippage.
- Maintain a clear area around you while using the axe to avoid accidents.
- Do not use the axe handle for prying or as a lever, as this may cause damage or injury.
- If the axe handle becomes damaged during use, stop using it immediately and replace it.
- Avoid using the axe in wet or slippery conditions to reduce the risk of accidents.

Instructions for Installation and Usage

1. Installation of Axe Head:

- Ensure that the axe handle is clean and free of debris.
- Align the axe head with the eye of the handle, ensuring a snug fit.
- Use a rubber mallet to gently tap the axe head onto the handle until fully seated.
- Check for any gaps between the axe head and handle; if present, adjust as necessary.
- Secure the axe head using a wedge or pin, if applicable, to prevent loosening during use.

2. Usage Instructions:

- Hold the axe handle firmly with both hands, positioning your hands appropriately based on the task.
- Stand with your feet shoulderwidth apart for stability.
- Swing the axe with controlled motion, ensuring the blade follows a safe path.
- After use, store the axe handle in a dry place, away from direct sunlight or extreme temperatures.

Disposal Instructions

- Dispose of the axe handle in accordance with local regulations.
- If the handle is damaged beyond use, consider recycling the wood material if permitted in your area.
- Do not dispose of the axe handle in regular household waste if it is still usable; consider donating it or giving it to someone who can use it safely.

Contact Information for Further Support

For any inquiries regarding the safety and use of the WOOX Volante Axe Handle, please reach out to the designated EU contact point. Ensure that you have your product details ready for reference.

Please remember that safety is paramount when using any tools. By following these guidelines, you can help ensure a safe and enjoyable experience with your WOOX Volante Axe Handle.