

Blades Accessories - WOOX Forte Axe Handle - 28" Axe accessory Hickory

Restore the structural integrity and timeless look of your WOOX FORTE hunting and camping axe with an official replacement handle. Designed to match the exact specifications of the original factory build, this replacement handle ensures your tool maintains its ideal weight, balance, and reliability out in the field.

Key Features

Premium American Hickory: Built from top-grade American Hickory wood, expertly selected for its incredible shock absorption, flexibility, and resistance to heavy impact.

Ergonomic Design: Contoured for a natural, secure grip that reduces hand fatigue during extended chopping, splitting, or bushcraft tasks.

Complete Hardware Kit: Comes equipped with the necessary mounting components (including wooden and metal wedges) to ensure a rock-solid, permanent fit with your axe head.

Weather-Resistant Finish: Treated with a protective finish to stand up against moisture, dirt, and harsh outdoor elements.

NO IMAGE
AVAILABLE

Attributes

- Name: WOOX Forte Axe Handle - 28" Axe accessory Hickory
- Manufacturer: WOOX
- Product no.: EU2019300
- Mfr. No.: BU.AXE003.02HND
- Colour: Black
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 810069391366

Table of Contents

- [Startpage](#)
- [English: WOOX Forte Axe Handle Safety Instructions](#)

WOOX Forte Axe Handle Safety Instructions

Introduction

Thank you for choosing the WOOX Forte Axe Handle. This replacement handle is designed to restore the structural integrity and aesthetics of your WOOX FORTE hunting and camping axe. To ensure safe and effective use of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always inspect the axe handle before use for any signs of damage or wear.
- Ensure that the axe head is securely attached to the handle before each use.
- Use the axe in a welllit area and ensure your working environment is clear of obstacles.
- Wear appropriate personal protective equipment (PPE), including gloves and safety glasses.
- Keep the axe out of reach of children and vulnerable individuals.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- **Handling:** Always grip the axe handle firmly with both hands when chopping or splitting.
- **Chopping Area:** Ensure that the area you are working in is free from other people and animals to prevent accidents.
- **Target:** Be aware of your target and ensure that there are no hidden hazards behind it.
- **Fatigue:** Take regular breaks to avoid fatigue, which can lead to accidents.
- **Weather Conditions:** Avoid using the axe in wet or slippery conditions to prevent loss of grip.

Instructions for Installation and Usage

Installation

1. **Remove Old Handle:** Carefully detach the old handle from the axe head, ensuring not to damage the head.
2. **Prepare New Handle:** Inspect the new WOOX Forte Axe Handle for any defects.
3. **Attach Handle:**
 - Align the axe head with the new handle.
 - Insert the handle into the axe head until it is fully seated.
 - Use the provided wooden and metal wedges to secure the handle in place.
4. **Check Fit:** Ensure that the axe head is firmly attached to the handle and does not wobble.

Usage

- Hold the axe firmly with both hands, ensuring your grip is secure.
- Use smooth and controlled motions when chopping or splitting.
- Always cut away from your body and maintain a safe distance from others.

Disposal Instructions

- Dispose of the old axe handle and any packaging materials responsibly.
- Follow local regulations for disposing of wood products.
- Do not burn treated wood as it may release harmful chemicals.

Contact Information for Further Support

For any inquiries regarding safety or product issues, please refer to the official WOOX contact information

available on the product packaging or the WOOX website.

Thank you for choosing WOOX. Stay safe and enjoy your outdoor activities!