

Lever Action Triggers (Pull weight is not adjustable) - LEVER ACTION FOR HENRY RIMFIRE MODELS, BLACK **2.5-3lb**

Designed to preserve the timeless feel of the historic Henry platform while removing the heavy, creep-laden pull of the stock trigger, the Timney Lever Action Trigger elevates your favorite rimfire rifle to a whole new level of accuracy. Whether you're a weekend plinker, small game hunter, or classic lever-gun collector, this single-stage upgrade delivers an incredibly crisp, glass-like break with zero slop.



Factory calibrated to a lightweight 2.5 to 3 lb. pull weight, this non-adjustable drop-in unit eliminates the guesswork and gives you consistent, repeatable performance right out of the box.

Clean Single-Stage Break: Preset at a crisp 2.5–3 lbs., providing instant, control-focused actuation to shrink your group sizes downrange.

Shoe Options for Personal Feel: Available in a classic Curved profile or a modern Straight shoe, allowing you to tailor the ergonomics to your preferred finger placement.

No-Gunsmithing Installation: Engineered as a complete, self-contained drop-in module that easily replaces the factory assembly in minutes using basic hand tools.

Hand-Calibrated Reliability: Each trigger is individually hand-assembled, tested, and calibrated in the USA to handle thousands of rounds of rimfire cycling.

American Craftsmanship: Machined from high-grade materials in Phoenix, Arizona, and backed by Timney's No-Hassle Legendary Lifetime Warranty.

Attributes

- Name: LEVER ACTION FOR HENRY RIMFIRE MODELS, BLACK **2.5-3lb**
- Manufacturer: TIMNEY
- Product no.: EU2019325
- Mfr. No.: LEVER GUN HENRY RIMFIRE
- Colour: Black
- Model: RIMFIRE
- Weapon type: Henry
- Delivery weight: 0.09kg
- Shipping height: 51mm
- Shipping width: 102mm
- Shipping length: 191mm
- EAN/UPC: 81950436873

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for Lever Action Triggers](#)

Safety Instruction Guide for Lever Action Triggers

Introduction

Thank you for choosing the Lever Action Trigger for Henry Rimfire Models. This guide provides essential safety instructions and guidelines to ensure safe and effective use of your product. Please read this document carefully before installation and use.

General Safety Guidelines

- Ensure that the product is used in accordance with all applicable laws and regulations.
- Always handle firearms and firearm components with care and respect.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for any signs of wear or damage.
- Do not modify the trigger in any way, as this may lead to unsafe conditions.

Specific Safety Precautions for Use

- Always ensure that the firearm is unloaded before installing or handling the trigger.
- Use appropriate eye and ear protection when operating firearms equipped with the trigger.
- Be aware of your surroundings and ensure a safe shooting environment.
- Avoid using the trigger under adverse weather conditions that could affect performance.
- If you experience any malfunctions or irregularities during use, cease operation immediately and consult a qualified gunsmith.

Instructions for Installation and Usage

Installation Instructions

1. Preparation

- Gather necessary tools: basic hand tools such as screwdrivers and wrenches.
- Ensure that you are in a welllit and safe environment.

2. Remove the Factory Trigger Assembly

- Ensure the firearm is unloaded.
- Follow the manufacturer's instructions to disassemble the firearm and remove the existing trigger assembly.

3. Install the Lever Action Trigger

- Carefully insert the Timney Lever Action Trigger into the trigger housing.
- Align the trigger with the mounting holes and secure it using the original screws.

4. Reassemble the Firearm

- Follow the manufacturer's instructions to reassemble the firearm.
- Doublecheck that all components are securely in place.

5. Test the Trigger

- Before using the firearm, perform a function check to ensure the trigger operates correctly.
- If any issues arise, consult a qualified gunsmith.

Usage Instructions

- When ready to shoot, ensure the firearm is pointed in a safe direction.
- Maintain a firm grip on the firearm and be prepared for the trigger pull.
- Follow standard firearms safety practices at all times.

Disposal Instructions

- Dispose of the product in accordance with local regulations for hazardous materials.
- Do not dispose of the trigger in regular household waste.
- Contact local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any questions, concerns, or safety inquiries regarding the Lever Action Trigger, please reach out to your local retailer or manufacturer. Ensure to have your purchase information on hand for reference.

Conclusion

By following these safety instructions and guidelines, you can enjoy the enhanced performance of your Lever Action Trigger while ensuring a safe shooting experience. Always prioritize safety and responsible firearm handling. Thank you for your commitment to safety.